


MSP 221 – Quick Start		
NOTE For full installation, configuration, and operation the MSP 221 user manual, which is available at This quick start provides basic instructions for a installer to set up and operate the MSP 221.	in experienced PORIA	m for the allation installation and installating the
Interface Description	to www.mane cr	nn source.
Input and Other Interface	Refer the to below	
	DVI Output Connect to the monitor or LED scree which has DVI interface.	_
Interfaces	VGA Output	
1Power Interface4HDMI Input25Indicator6USB Interface	Can connect to the device with VGA input or VGA monitor.	
(3) VGA Input	Operation Manual	
VGA Input	Program Area	
Input the video signal from HD player, DVD, and computer, etc.		
HDMI Input	VGA	
Input the video signal from HD player, DVD, set top box, computer, disk, etc.	COPY WRITE1 WRITE2	
USB Interface	Operation Manual	
Used to control the computer and upgrade.	1. Power on, the 7 indicator light one by all lights are off.	one, and then
Indicator	2. HDMI+COPY+ENTER: Write external HDMI/DVI EDID into H	DMI WRITE1:
Power indicator 2 lights when device has power supply. LED indicator 5 lights when connect USB to computer.	3. HDMI+WRITE1+ENTER: Write EDID of HDMI WRITE1 into HE	
Dowon	4. HDMI+WRITE2+ENTER: Write EDID of HDMI WRITE2 into HD	
Power Connect one end of the power adapter with the device,	5. VGA+COPY+ENTER:	
the other end into a socket. Plug in, power indictor light	Write external VGA EDID into VGA W 6. VGA+WRITE1+ENTER:	/RITE1.
means the device works normally.	Write EDID of VGA WRITE1 into VG	A IN of other device.
The device uses the standard 12V/3A power supply.	(The EDID of VGA WRITE1 is RGBVG	A which is
Output Inteface	factory default;) 7. VGA+WRITE2+ENTER:	
3	Write EDID of VGA WRITE2 into VG/ (The EDID of VGA WRITE2 is RGBV(factory default;) 8. EDID reset: Press ENTER+WRITE2+WRITE1+CC	GA which is
1) 2	+HDMI+VGA+COPY+WRITE1+WRIT	E2 in anticlockwise
1 DVI Output 2 VGA Output	to reset MSP 221 EDID.	
Address:S601-608 Weiye Building Torch Hi-Tech Industrial DeveloprTel:00865925771197Fax:00865925771202Email:sales@rgblink.comhttp://www.rgblink.cn	nent Zone Xiamen,Fujian Province, P.R.C	MSP 221 Quick Star Version 2.0 Page 2

Back Panel Description

Functional Description Block Diagram

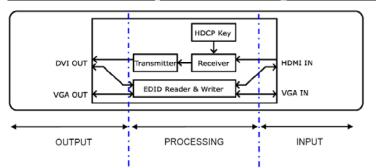

Input and Output Resolution

VGA	800 ×600 @60Hz	1024×768 @60Hz
1024×768 @75Hz	1024×768 @85Hz	1280×768 @60Hz
1280×800 @60Hz	1280×1024 @60Hz	1360×768 @60Hz
1366×768 @60Hz	1400×1050 @60Hz	1440×900 @60Hz
1600×1200 @60Hz	1680×1050 @60Hz	1920×1080 @50Hz
1920×1080 @60Hz	1920×1200 @60Hz	
DVI	800 ×600 @60Hz	1024×768 @60Hz
1024×768 @75Hz	1024×768 @85Hz	1280×768 @60Hz
1280×800 @60Hz	1280×1024 @60Hz	1360×768 @60Hz
1366×768 @60Hz	1400×1050 @60Hz	1440×900 @60Hz
1600×1200 @60Hz	1680×1050 @60Hz	1920×1080 @50Hz
1920×1080 @60Hz	1920×1200 @60Hz	2048×1152 @60Hz
2560× 812 @60Hz	2560×816 @60Hz	