


FLEX 16

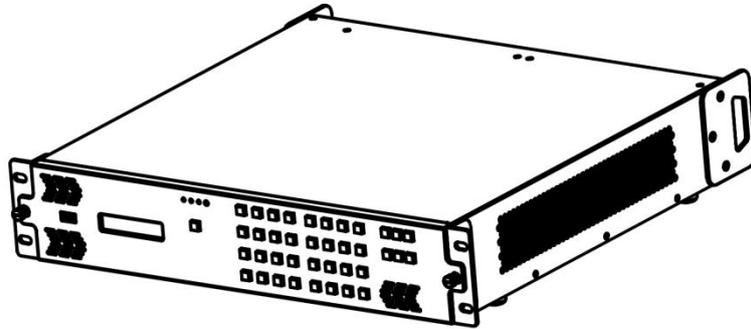

USER MANUAL

RGBlink[®]

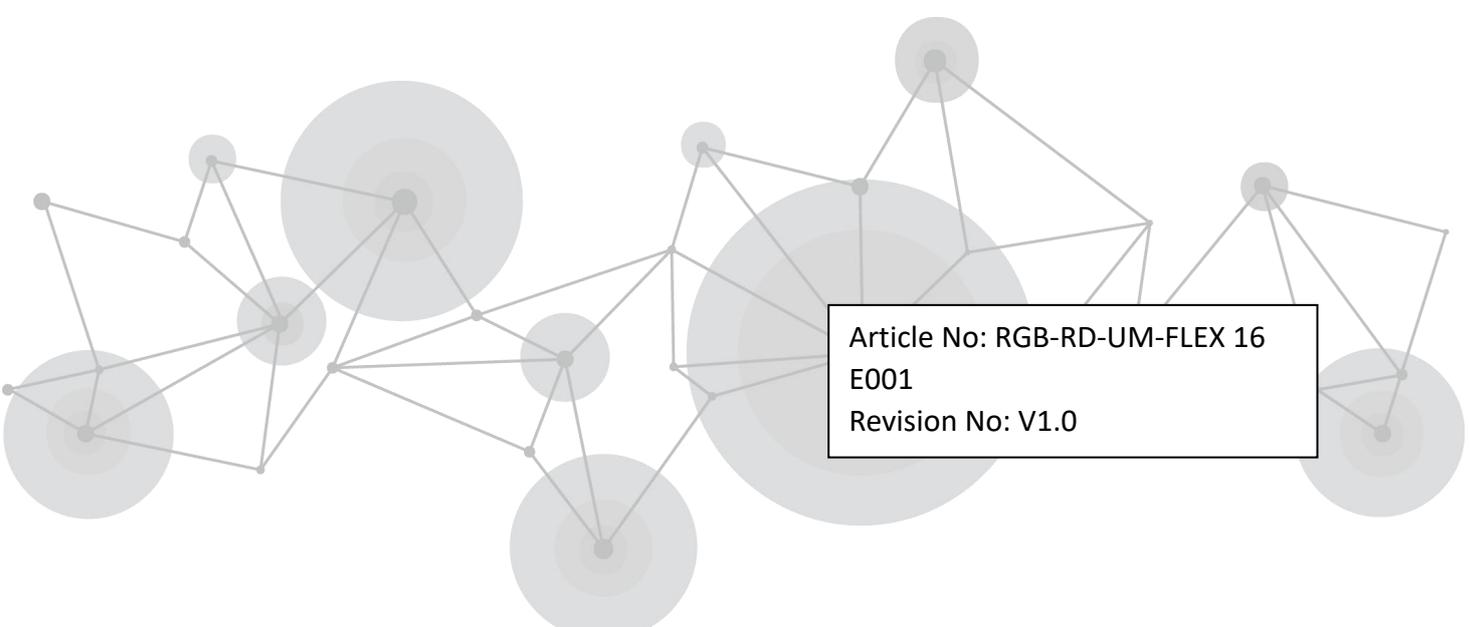

Article No: RGB-RD-UM-FLEX 16
E001
Revision No: V1.0

CONTENTS

<i>Declarations</i>	2
FCC/Warranty	2
Operators Safety Summary	3
Installation Safety Summary	3
<i>Chapter 1 Your Product</i>	5
1.1 In the Box	5
1.2 Product Overview	6
1.2.1 Basic Front Panel	7
1.2.2 Matrix Front Panel	8
1.2.3 Back Panel	9
1.2.4 Dimension	10
<i>Chapter 2 Install Your Product</i>	11
2.1 Plug in Signals	11
2.2 Plug in Main Power	11
<i>Chapter 3 Use Your Product</i>	12
3.1 Matrix Panel Operation	12
3.1.1 MENU Operation	12
3.1.2 Button Operation	14
3.2 XPOSE Control FLEX 16	16
3.2.1 Install Software	16
3.2.3 Login to the Software	19
3.2.4 Connect to Software	20
3.2.5 Output Setting	22
3.2.6 Operation Mode	26
3.2.7 System Settings	41
3.2.8 Logout	44
<i>Chapter 4 Order Codes</i>	45
4.1 Product	45
4.2 Modules	45
4.2.1 Input	45
4.2.2 Output	45
4.2.3 Others	45
<i>Chapter 5 Support</i>	46
<i>Chapter 6 Appendix</i>	47
6.1 Specification	47
6.2 Terms & Definitions	52
6.3 Revision History	57

Thank you for choosing our product!

This User Manual is designed to show you how to use this video processor quickly and make use of all the features. Please read all directions and instructions carefully before using this product.

Declarations

FCC/Warranty

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference.

Guarantee and Compensation

RGBlink provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. On receipt, the purchaser must immediately inspect all delivered goods for damage incurred during transport, as well as for material and manufacturing faults. RGBlink must be informed immediately in writing of any complains.

The period of guarantee begins on the date of transfer of risks, in the case of special systems and software on the date of commissioning, at latest 30 days after the transfer of risks. In the event of justified notice of compliant, RGBlink can repair the fault or provide a replacement at its own discretion within an appropriate period. If this measure proves to be impossible or unsuccessful, the purchaser can demand a reduction in the purchase price or cancellation of the contract. All other claims, in particular those relating to compensation for direct or indirect damage, and also damage attributed to the operation of software as well as to other service provided by RGBlink, being a component of the system or independent service, will be deemed invalid provided the damage is not proven to be attributed to the absence of properties guaranteed in writing or due to the intent or gross negligence or part of RGBlink.

If the purchaser or a third party carries out modifications or repairs on goods delivered by RGBlink, or if the goods are handled incorrectly, in particular if the systems are commissioned operated incorrectly or if, after the transfer of risks, the goods are subject to influences not agreed upon in the contract, all guarantee claims of the purchaser will be rendered invalid. Not included in the guarantee coverage are system failures which are attributed to programs or special electronic circuitry provided by the purchaser, e.g. interfaces. Normal wear as well as normal maintenance are not subject to the guarantee provided by RGBlink either.

The environmental conditions as well as the servicing and maintenance regulations specified in this manual must be complied with by the customer.

Operators Safety Summary

The general safety information in this summary is for operating personnel.

Do Not Remove Covers or Panels

There are no user-serviceable parts within the unit. Removal of the top cover will expose dangerous voltages. To avoid personal injury, do not remove the top cover. Do not operate the unit without the cover installed.

Power Source

This product is intended to operate from a power source that will not apply more than 230 volts rms between the supply conductors or between both supply conductor and ground. A protective ground connection by way of grounding conductor in the power cord is essential for safe operation.

Grounding the Product

This product is grounded through the grounding conductor of the power cord. To avoid electrical shock, plug the power cord into a properly wired receptacle before connecting to the product input or output terminals. A protective-ground connection by way of the grounding conductor in the power cord is essential for safe operation.

Use the Proper Power Cord

Use only the power cord and connector specified for your product. Use only a power cord that is in good condition. Refer cord and connector changes to qualified service personnel.

Use the Proper Fuse

To avoid fire hazard, use only the fuse having identical type, voltage rating, and current rating characteristics. Refer fuse replacement to qualified service personnel.

Do Not Operate in Explosive Atmospheres

To avoid explosion, do not operate this product in an explosive atmosphere.

Installation Safety Summary

Safety Precautions

For all FLEX 16 installation procedures, please observe the following important safety and handling rules to avoid damage to yourself and the equipment.

To protect users from electric shock, ensure that the chassis connects to earth via the ground wire provided in the AC power Cord.

The AC Socket-outlet should be installed near the equipment and be easily accessible.

Unpacking and Inspection


Before opening FLEX 16 shipping box, inspect it for damage. If you find any damage, notify the shipping carrier immediately for all claims adjustments. As you open the box, compare its contents against the packing slip. If you find any shortages, contact your sales representative. Once you have removed all the components from their packaging and checked that all the listed components are present, visually inspect the system to ensure there was no damage during shipping. If there is damage, notify the shipping carrier immediately for all claims adjustments.

Site Preparation

The environment in which you install your FLEX 16 should be clean, properly lit, free from static, and have adequate power, ventilation, and space for all components.

Chapter 1 Your Product

1.1 In the Box

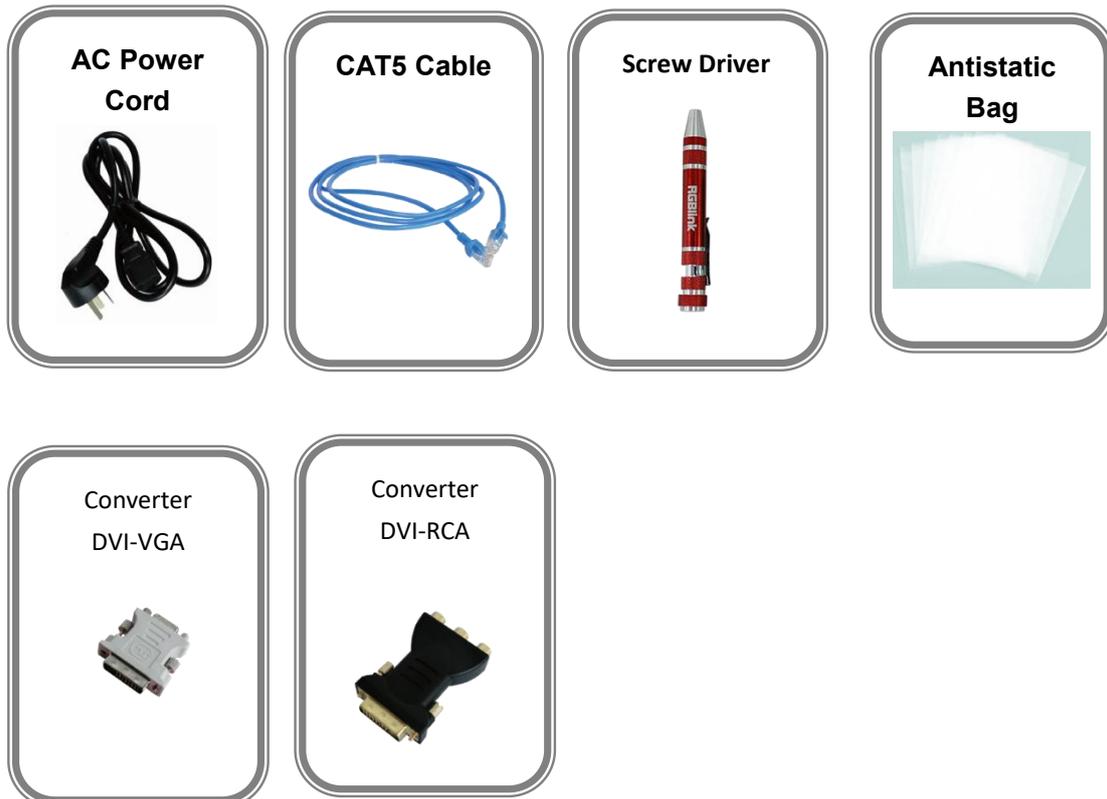

Note:

AC Power Cable supplied as standard according to destination market.


USB is contained on the Warranty/Registration Card. Please keep.

1.2 Product Overview

FLEX 16 is a matrix capable to distribute any input signal to any output signal through its consistent modular capability to control up to 16 different inputs and 16 different outputs independently. Different devices can be connected in each output and input. It supports HDMI, DVI, SDI, USB and HDBaseT input and output signals, as well as DP output. FLEX 16 features in splitting mode for up to 32K1K, and simple managed by XPOSE software.


System Connection

RGBlink video processing solutions provide a range of flexible configuration options for professional applications.

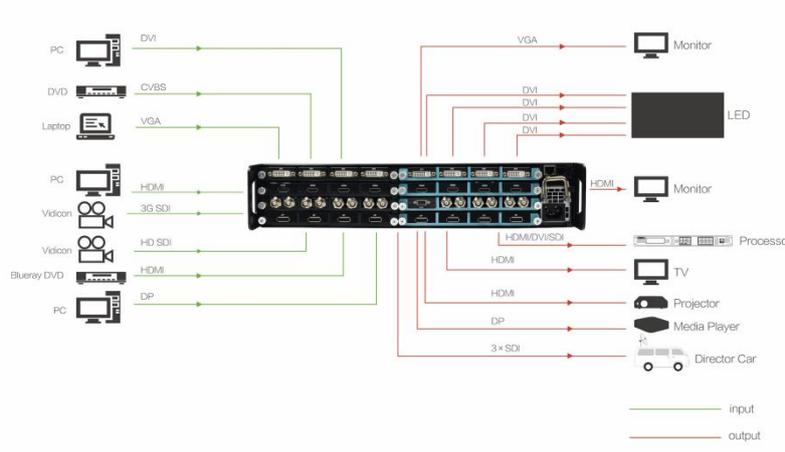


FLEX 16 System Connection Diagram

1.2.1 Basic Front Panel

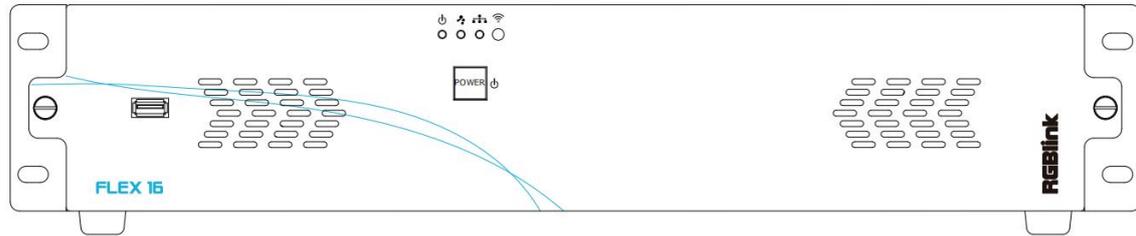

Panel Instruction			
	USB INTERFACE To upgrade the device		Power-Standby Button Keep pressing for 3S to switch.
	Power Indicator Light up when device power on Keep lighting when device is working		Lan Indicator Lights up when LAN communication occurs
	Serial Port Indicator Lights up when serial communication occurs		Infrared Indicator


1.2.2 Matrix Front Panel

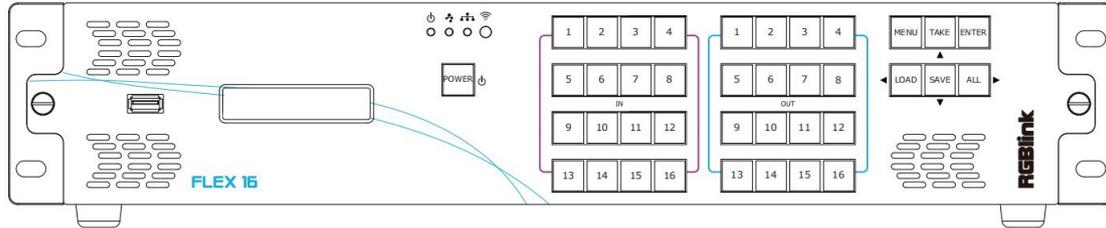

Matrix front panel is optional

Panel Instruction			
	USB interface, for upgrading		IN 1~16, Input signal source selection button
	LCD Panel Show operation menu items		OUT 1~16, Output port selection button
	Power indicator lights when device has power supply.		Menu button to open up menu items and back
	Serial Port indicator lights up when serial port is connected, flashes when serial communication happens		Switch input source for matrix output
	LAN indicator indicating communication through LAN port, lights up when LAN port is connected, flashes when LAN communication happens		Enter subsidiary menu or confirm operation
	IR indicator Indicate IR communication flashes when there is communication IR e.g. remote control.		Load setting from SAVE
	Power-Standby button Keep pressing for 3S to switch		Save setting to device
			Choose all outputs in Matrix operation mode.

1.2.3 Back Panel

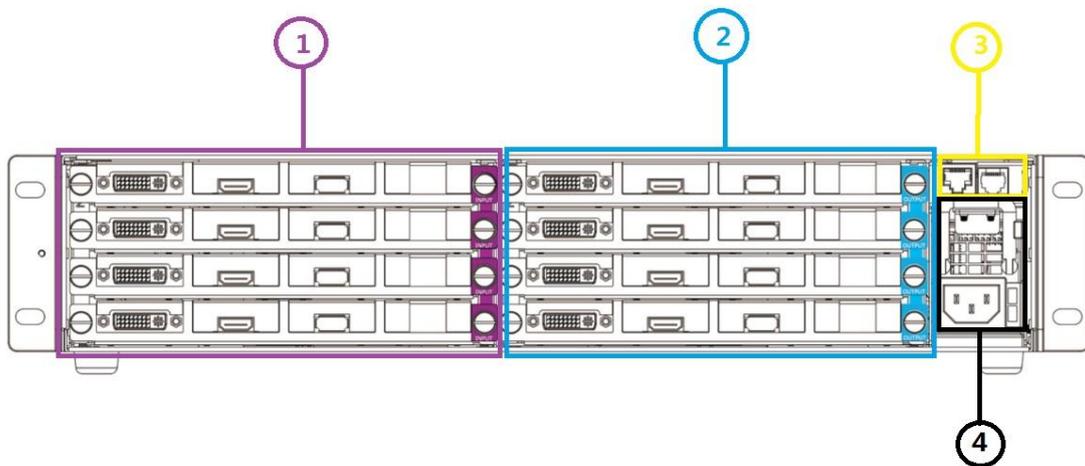

Input Interface

1	<p>Input Module Slots</p> <p>Supports input signals including HDMI, DVI, SDI, USB and HDBaseT.</p>
---	---

Output Interface

2	<p>Output Card Slots</p> <p>Supports output signals including HDMI, DVI, SDI, USB, HDBaseT and DP.</p>
---	---

Control Interface


3	<p>Communication Ports</p> <p>RS232&LAN</p> <p>Connect to XPOSE software</p>
---	---

Power Connection

4	<p>Power Supply Module</p> <p>Socket-IEC</p>
---	---

1.2.4 Dimension


Following is the dimension of FLEX 16 for your reference:

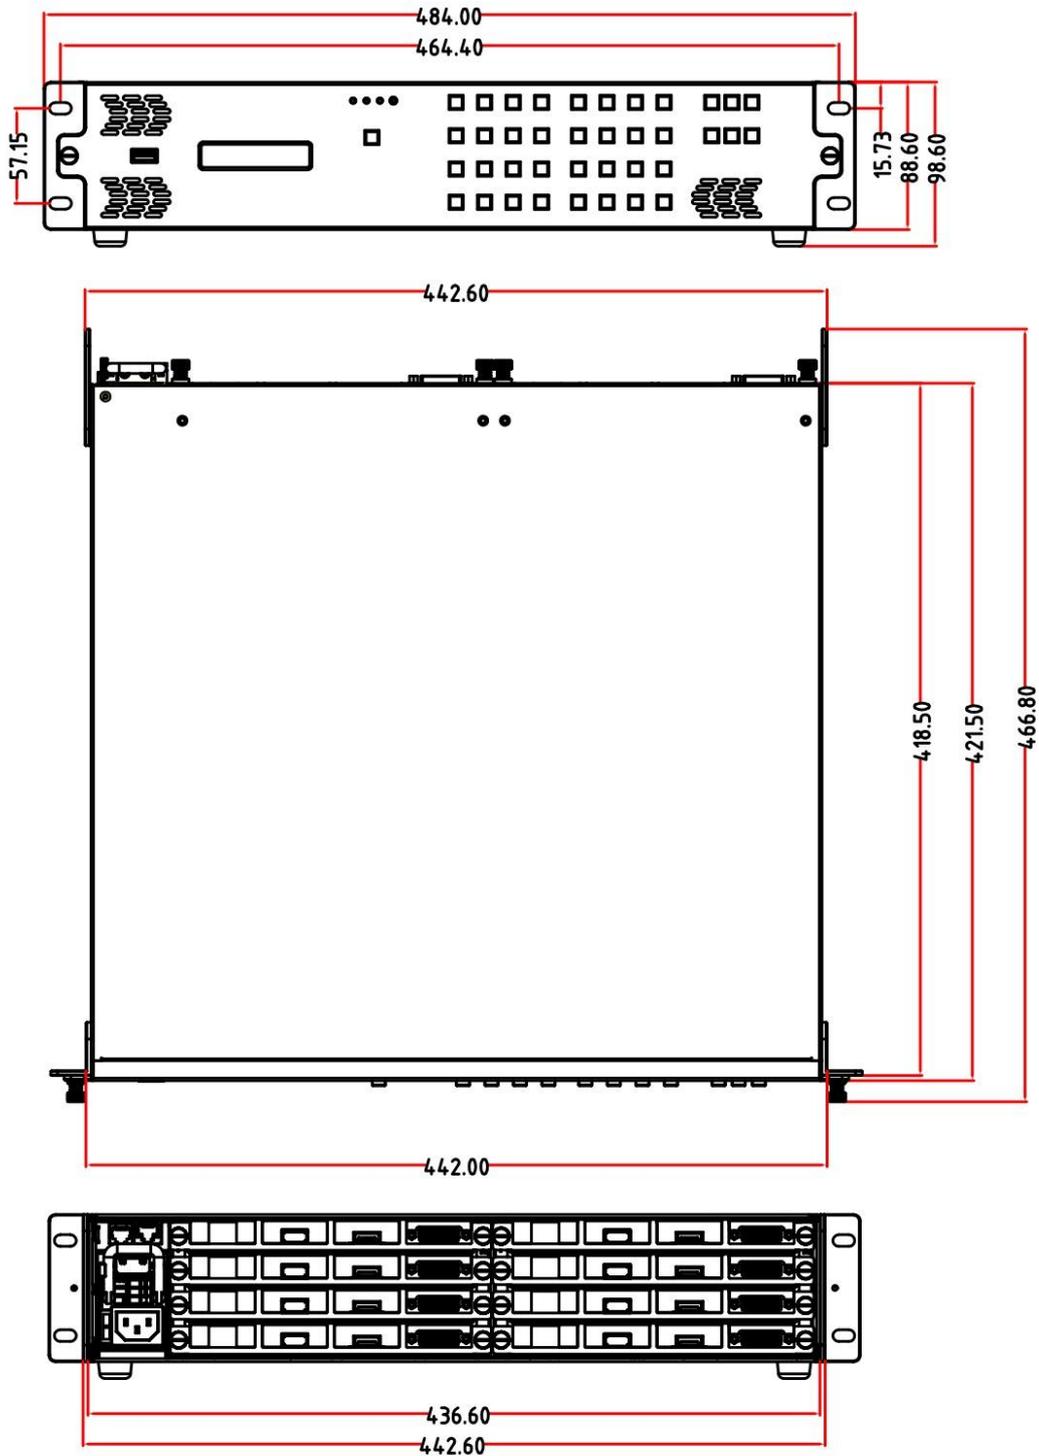

Chapter 2 Install Your Product

2.1 Plug in Signals

Connect signals to the product (ensure all devices are powered off first). Tighten connector screws/locks where provided. Connect to XPOSE software by CAT5 cable. RGBlink provides a network cable for this connection, as a standard accessories. Please check in the package for this cable.

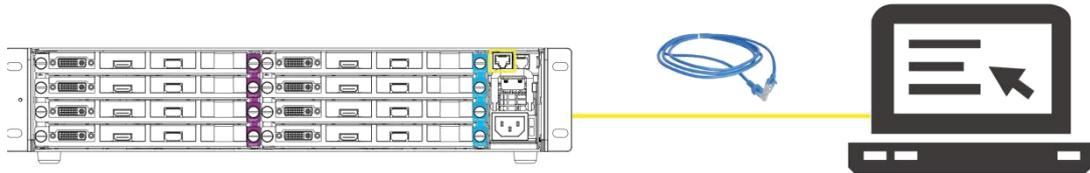

2.2 Plug in Main Power


Connect IEC cable to device and plug into wall socket. Turn on power at wall socket. The power indicator on front panel lights.

Chapter 3 Use Your Product

3.1 Matrix Panel Operation

3.1.1 MENU Operation

Menu Structure




Basic Operation

Press MENU button  and enter the MENU item




USE the buttons with arrows of up left right down direction to select.

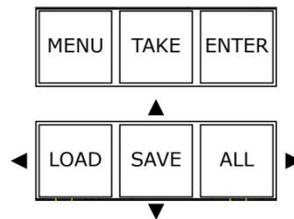

Press ENTER  to enter the selected menu item.

STATUS

Shows : the status of each input to output and the LCD screen shows the exact info, as following example In→Out,



And the software version, serial number and IP address of the device.

RESET

To go back to the beginning status, in the RESET item, LCD screens shows instruction as follow



PRESS ANY KEY
PRESS MENU TO EXIT

LOGO

Display logo ON/OFF



LOGO DISP
→ON OFF

LANGUAGE

To switch language between Chinese and English



LANGUAGE/语言
→ENGLISH 中文

LOCK

Lock front panel and make all buttons invalid. After panel is locked, MENU button flashes. The LCD shows info as follow:




FRONT PANEL LOCKED
PRESS MENU 3S UNLOCK

After front panel is unlocked, MENU button light goes out.

WORK TIME

Show the total boot times and working time up to now.



BOOT TIMES: 15
TOTAL TIME:650MIN


3.1.2 Button Operation

Power Up

After the device is connect to power, it will automatically boot up. After the device is powered up LCD shows the following:




Select output

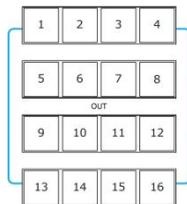

Press any button among 1-16 in OUT area, the corresponding output can be selected and the button light illuminates.

Select input

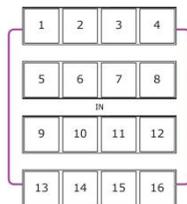

After the output is selected, press the button among 1-16 in IN area and the button flashes. The corresponding input is taken to the output immediately.

Select ALL output



Press button ALL and all buttons in OUT area light up, then press any button in IN area, all outputs display the one selected input. For example, after pressing button ALL and press button 6 in IN area, all the displays shows the image of input 6. The LCD on device shows the info below:



Press button ALL again, all lights go out except button 1 in OUT.

SAVE

SAVE

If the IN→OUT (matrix) setting need to be saved, press button SAVE , LCD will show instruction as below

SAVE TO: _

At this time, press any button among 1-16 in IN area, it means save to the corresponding position of 1-16,press any button among 1-16 in OUT area, it means save to the corresponding position of 17-32. i.e., press button 2 in IN area means save to SAVE 2, press button 2 in OUT area, means save to SAVE18.

LOAD

LOAD

If the saved setting need to be recalled,press button LOAD, LCD will show as below

LOAD FROM: _

The buttons keep illuminating indicates that these SAVE are available and the latest saved position flashes. .i.e there are in 2 position SAVE 2 and SAVE 18 in sequence,. Button 2 in IN area keep illuminating and button 2 in OUT area flashes.

POWER



POWER-STAND BY MODE

Press button POWER LCD shows the indication as follow:

ENTER STANDBY MODE
YES<ENTER>,NO<MENU>

In stand by mode, press POWER for 3S, all buttons flashes one by one immediately and LCD shows

RGBLINK
FLEX 16

5S later, the device goes back to work and in the status before stand by.

3.2 XPOSE Control FLEX 16

3.2.1 Install Software

Minimum Requirements

Windows

Operation System	Windows 7/8/10
Processor	1GHz/32 bit or 64 bit processor
Memory	2Gb
Hard Disk	16Gb
Graphics	128Mb/DirectX9
Display	1280X720

Mac

Operation System	Mac OS
Processor	1.0GHz+
Memory	512M+
Hard Disk	512M+
Graphics	512M+
Display	1366x768




1. Double click icon , it will pop-up the Installer Language box, select the language, for example, select “English”, and click “OK” to confirm.



It will pop-up the installer box, and click “Next” to install, as follows:



2. Select “Browse...” to select the XPOSE software install location and click install:

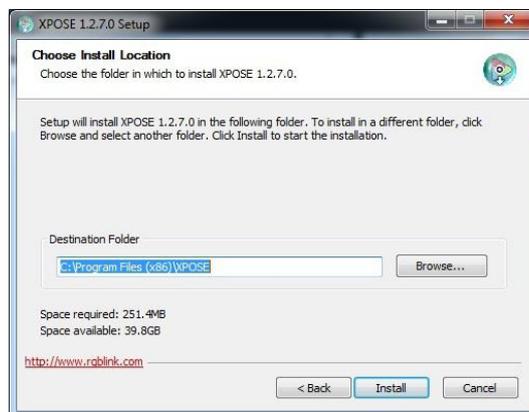

3. User should get the rights in “Roles Management” when install the software to disk C if the system is Windows 7 or above.



4. Click “Finish” and is ready to run the XPOSE management software:




3.2.3 Login to the Software




1. Double click the icon XPOSE on the desktop, then login into the interface. The user name is Admin, and defaultly there is no password. Select “FLEX 16”, select language “English” and enter the software by clicking “Login”.



2. If user wants to change the language to Chinese, click the drop down arrow after “Language” and select “中文”, then click “Login” to enter the software.

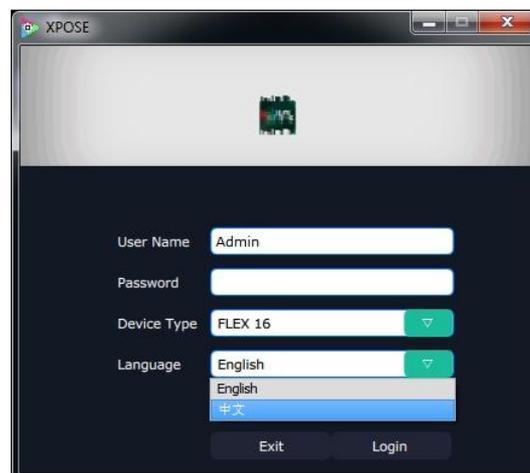


3. After entering the software, the main interface shows as follows:

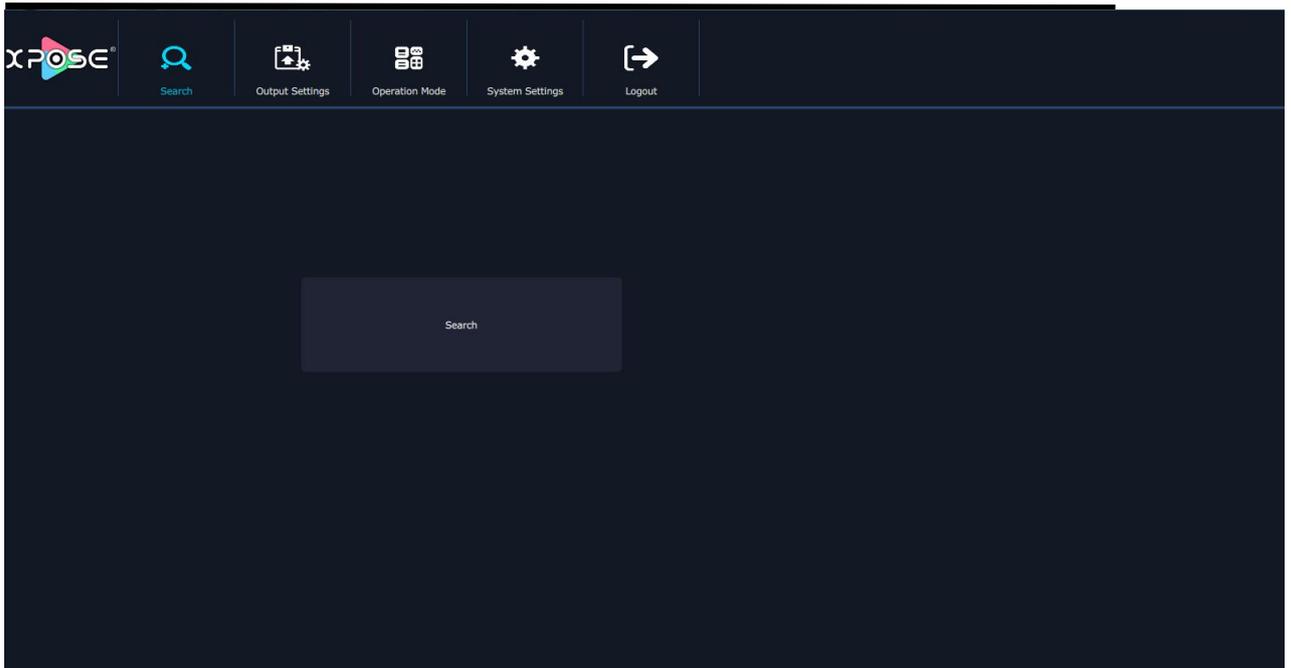


XPOSE management software consists of Output Setting, Operation Mode, System Settings and Log out. In the following parts come with the detail.

3.2.4 Connect to Software


The remote controller PC which runs XPOSE connects with Flex 16 by the network cable or USB-RJ11 serial cable (with the standard accessories).

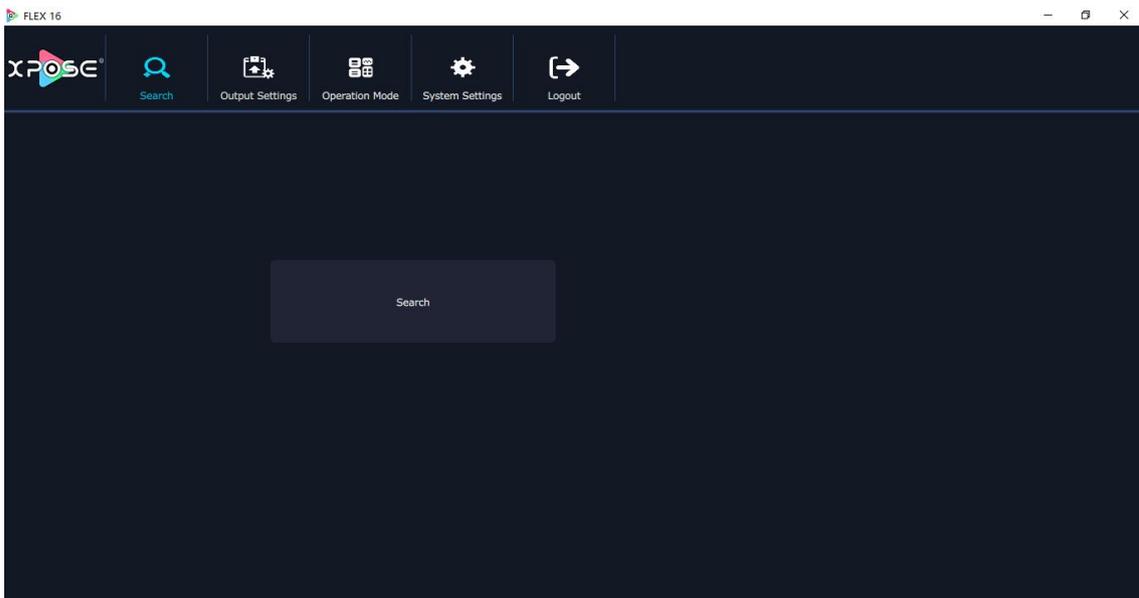


After login on XPOSE, Search device and find FLEX 16

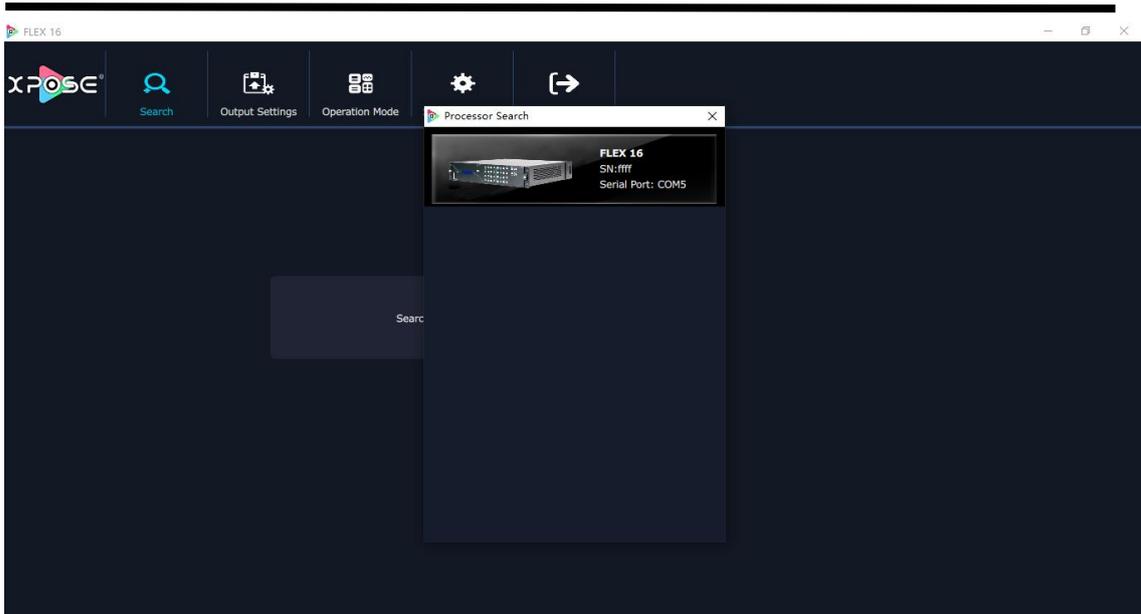


Click the FLEX 16 icon and sync

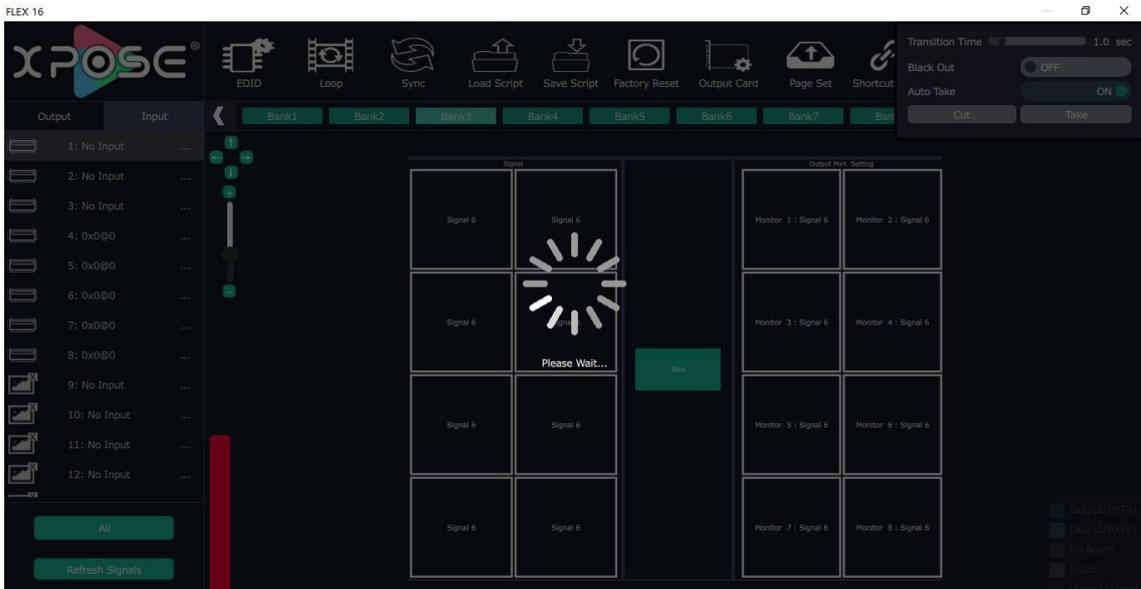


And sync done.

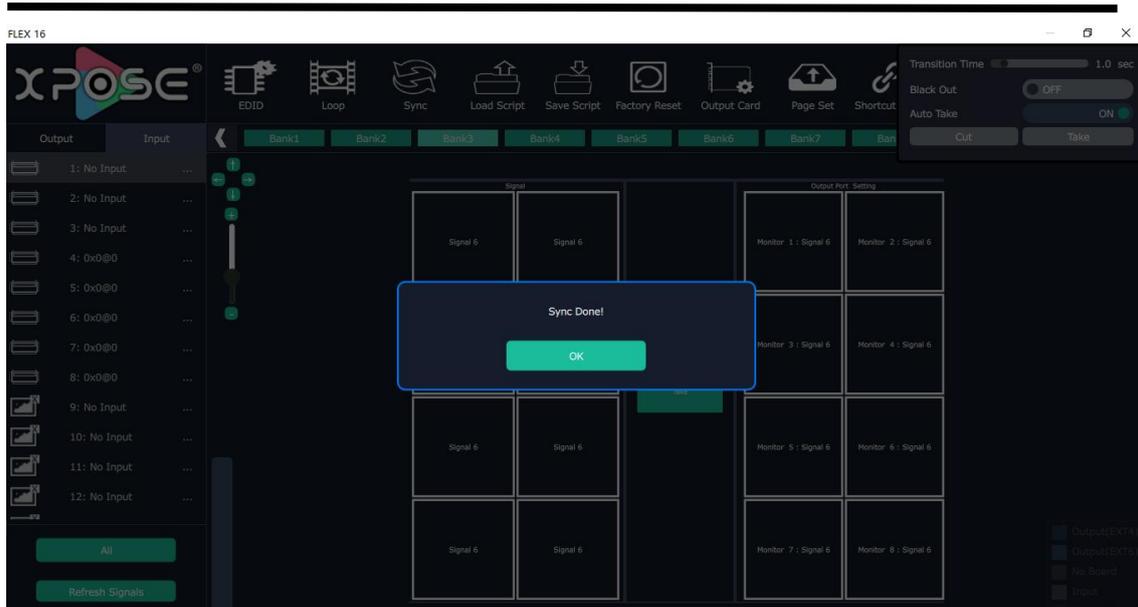


3.2.5 Output Setting

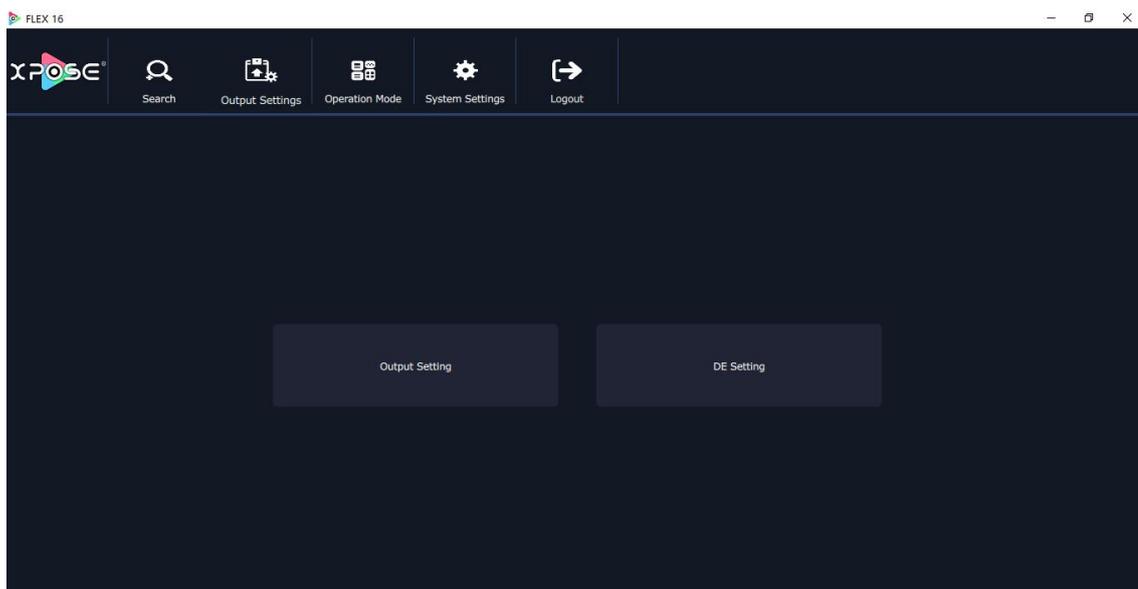

Output setting

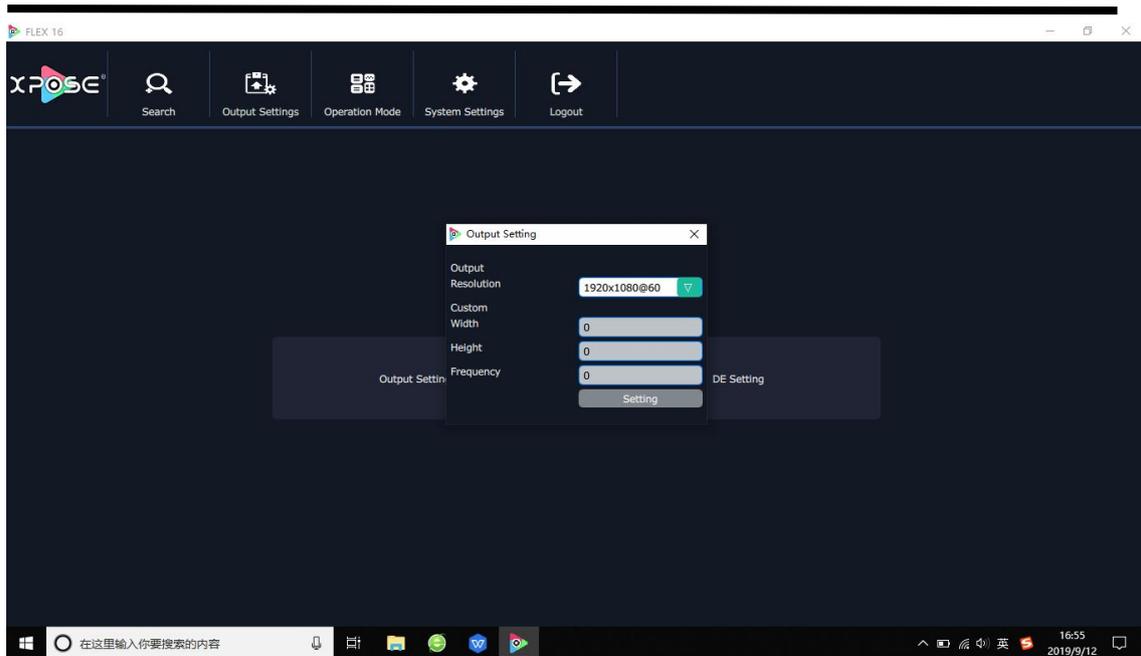

28 types of standard resolution available to choose.


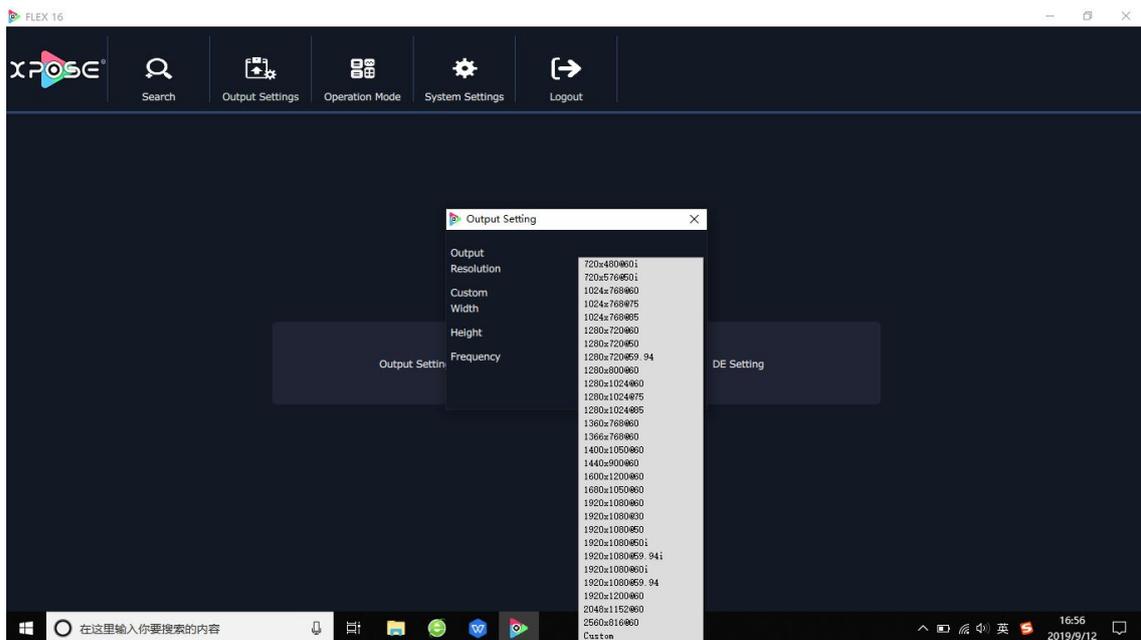


User can custom the resolution if no proper resolution in the list,

Note: avoid using following resolution


720x480i@60Hz and 720x576i@50Hz (not supported on all output modules),

2560*816@60 and 2048*1152@60 (not supported on DVI and HDMI output) .

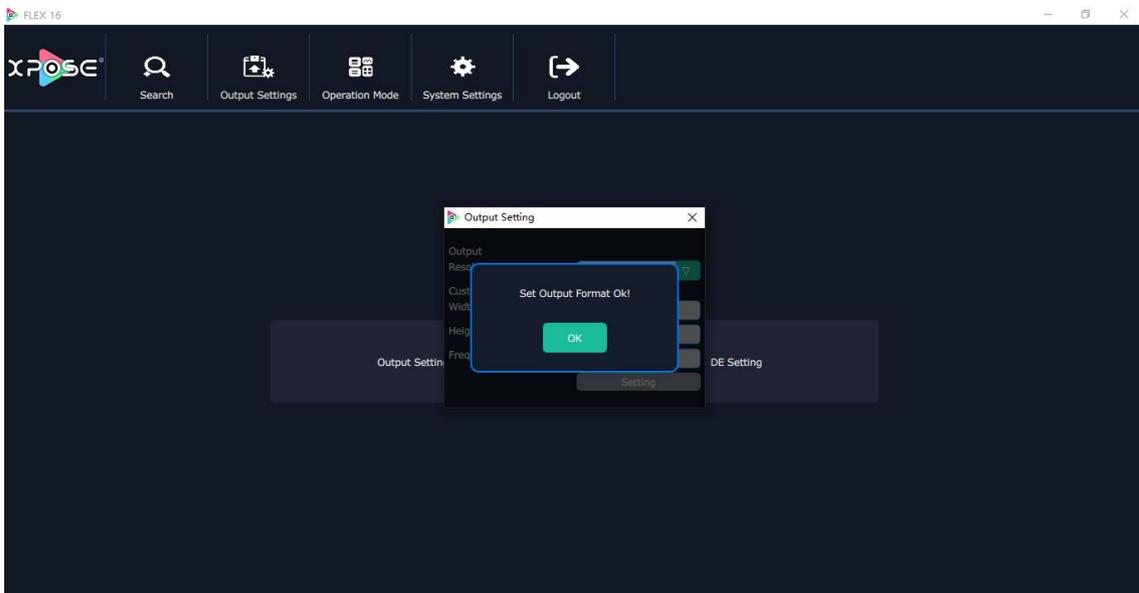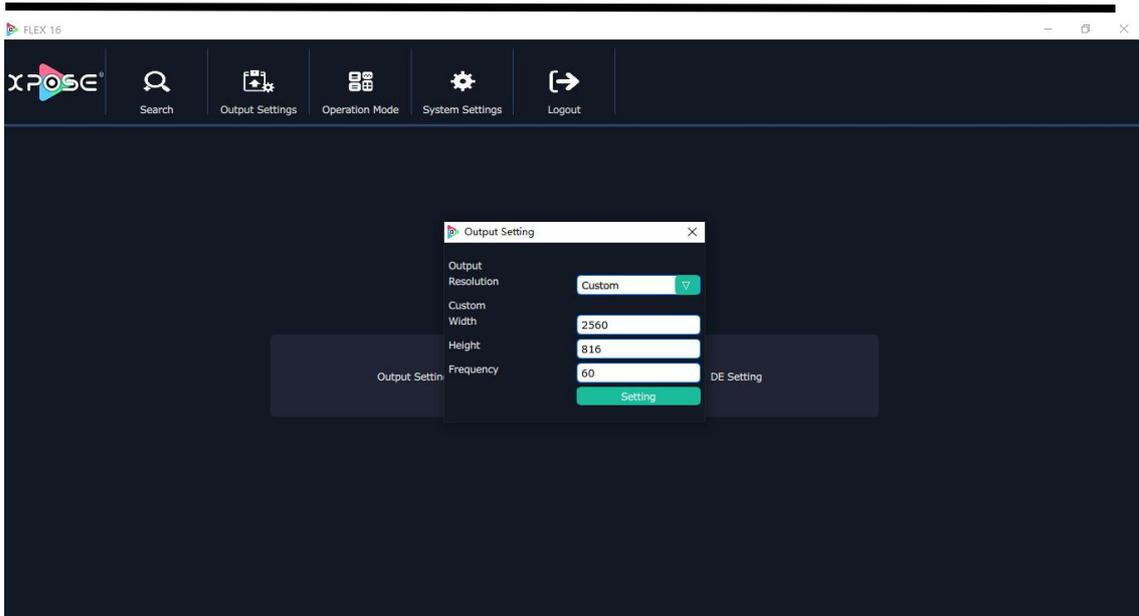

Output setting is for all output ports from one output EXT (EXT-4 or EXT-6)

DE setting

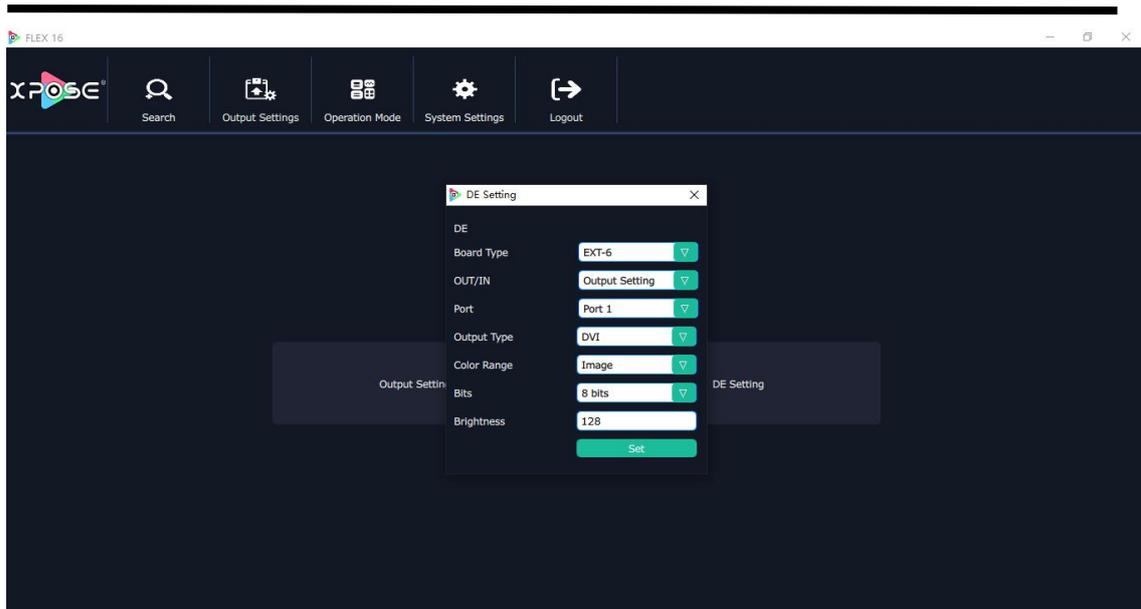

Board type:EXT-6 (EXT 4F-OS Splicing EXT interface) EXT 4 (EXT 4F OM Matrix EXT interface, EXT 4F IM matrix input ext interface)

Port :1-16


Output Type:DVI or HDMI

Color Range:Image or Video


Bits:DVI 8bits, HDMI 8bits | 10bit | 12bit

Brightness:0-128

Out/In: Output Setting or Input Setting, when choose EXT 4, users need to choose output setting or input setting.

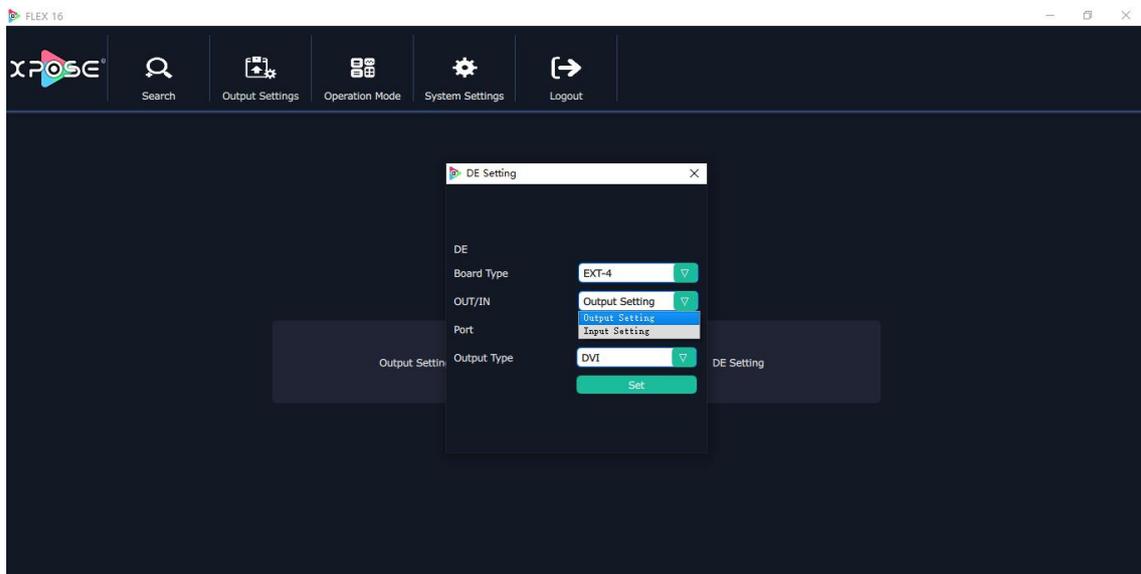


DE setting done

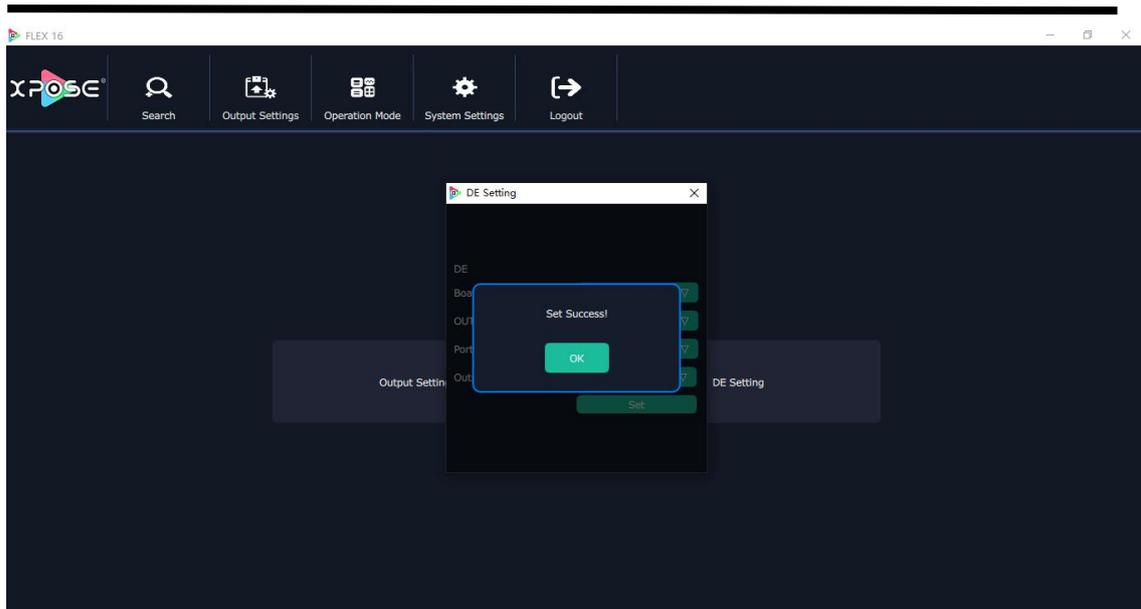

3.2.6 Operation Mode


There are 2 working modes, including the Matrix mode and Splitting Mode. Click the “Operation Mode”, and enter the interface as follows:

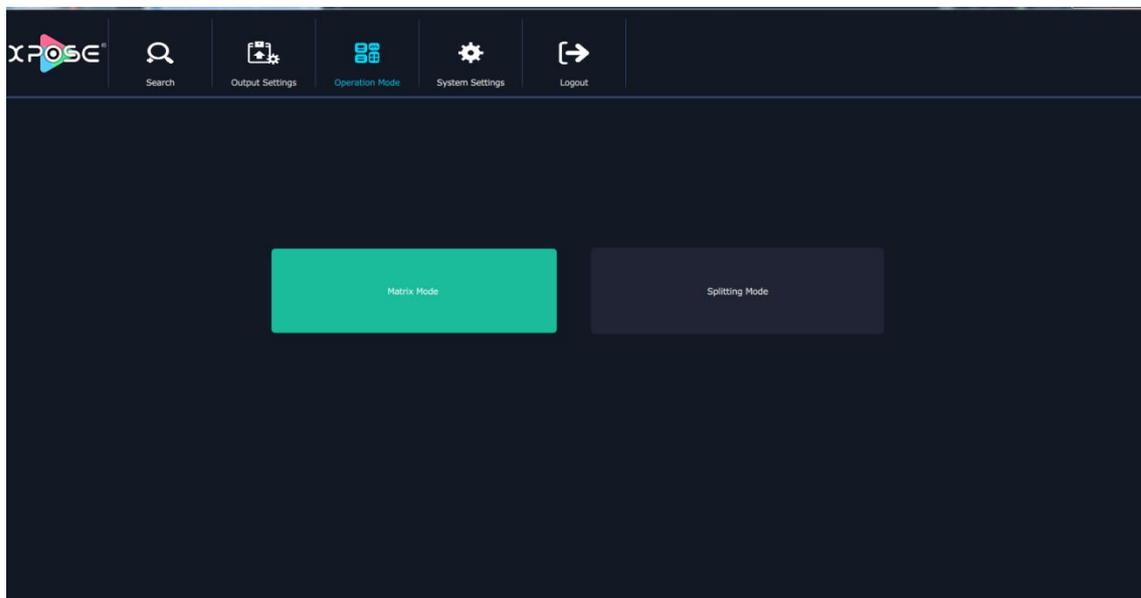


Matrix Mode and Splitting Mode are included in operation mode, specific as follows:


Matrix Mode


Click the “Matrix Mode”, and enter to the interface as follows:

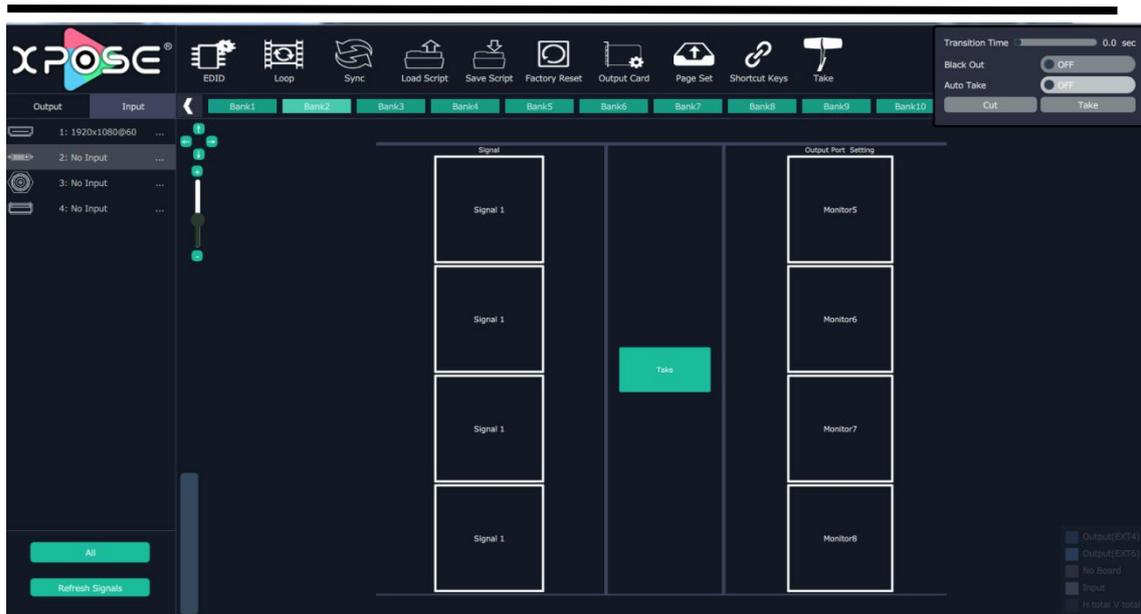

In→Out

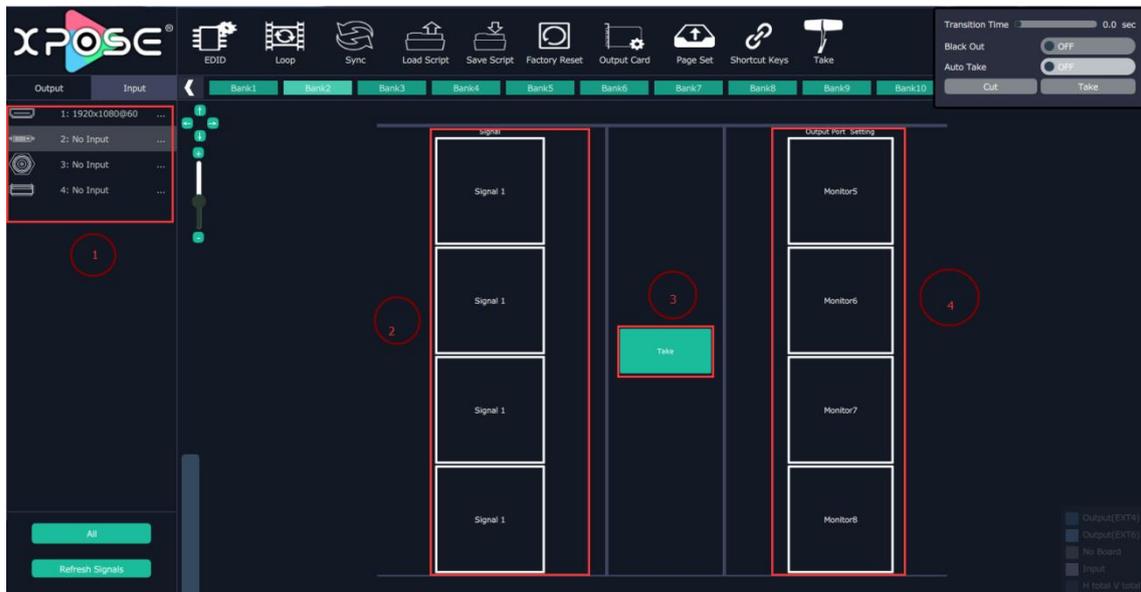

1. Choose input source from the signal source list
2. Drag the signal source to Signal
3. Click Take 
4. The display will show the input source correspondingly as the following show:

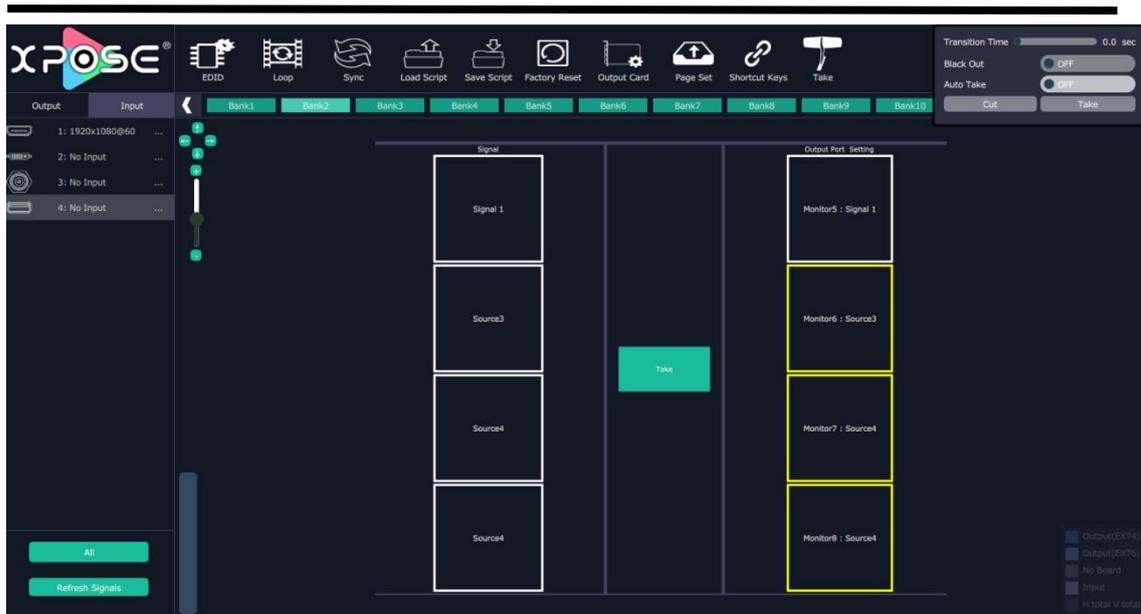


1 In→All Out

1.Choose one input source from the signal source list

2.Click All 

3.Click Take 

4.All display will show the one chosen input source as the following show:

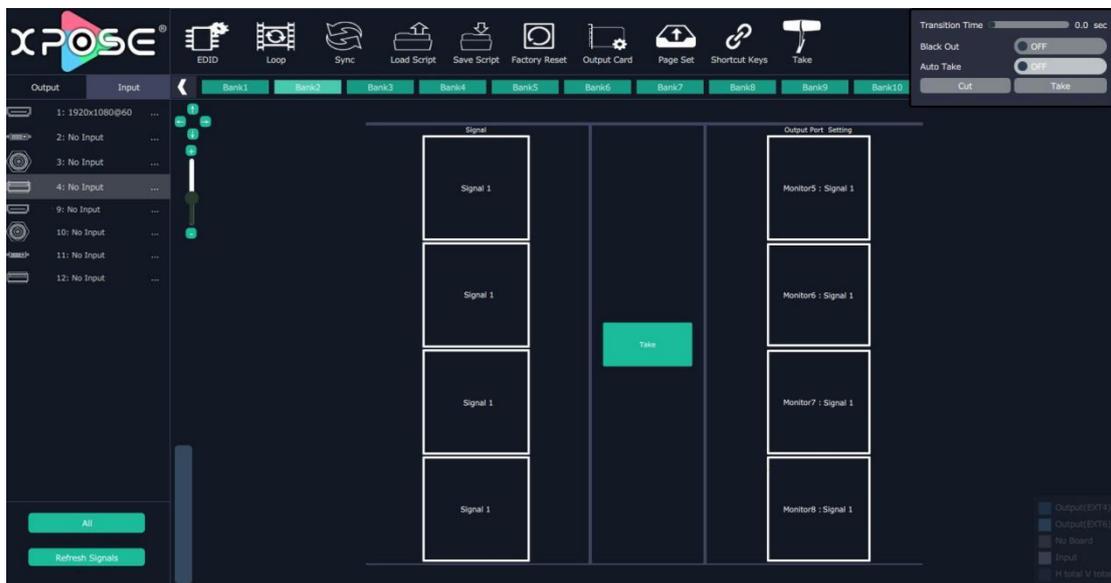


For FLEX 16 with matrix front panel, users can use XPOSE or front panel panel to control the device but cannot enter splitting mode.


For FLEX 16 with basic front panel, users use XPOSE to control and can use splitting mode.

Splitting Mode

Click the “Splitting Mode”, and pop-up window as follow:

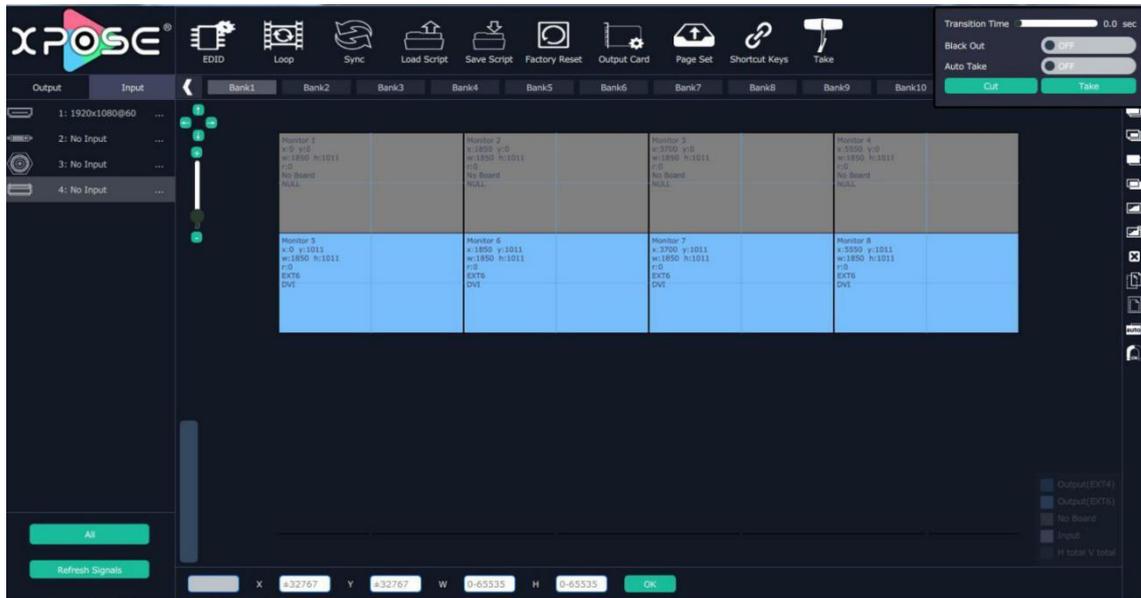


To do quick splitting, users can choose signal from signal list and drag it to the window. Drag the border of the layer to cover all the monitors.

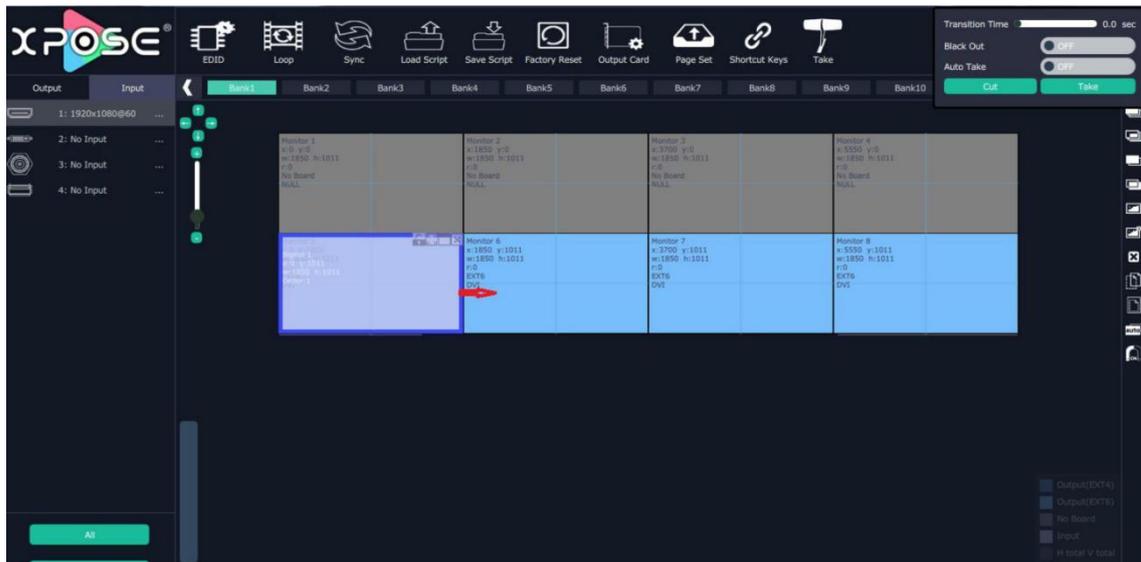

For example, do splitting on 4 monitors, after setting the resolution of each output, drag the input source to the output window and cover up all outputs.

To make the signal cover up all outputs more exactly, users can type in the total width and height of the desired video wall size.



Input Setting

The signal list is shown as follows:



It displays the input module type, the quantity of inputs and input format. Click"... "after the format of input for the following settings:

For HDMI and SDI input there are settings as below:



Change Name: Select "New Name", and input the new name, click "OK" after setting.



Set Input Property: Right click the input and select "Input Property", it will enter to the interface as follows:



Scale: Set the X, Y, width and height.

Crop: Crop the left, top, width and height.

Display Mode: Select “Live” or “Freeze”.

Mirror: Enable or disable the mirror function, default “OFF”.

Bypass Mode: Enable or disable the bypass mode. When select “ON”, the output **format** will be the same with the input format.

Alpha: Set the alpha, the adjustment range is 0~128.

Sharpness: Set the sharpness, the adjustment range is 0~100.

Brightness: Set the brightness, the adjustment range is 0~100.


Contrast: Set the contrast, the adjustment range is 0~100.

Saturation: Set the saturation, the adjustment range is 0~100.

Color Term: Set the color temp (red, green and blue), the adjustment range is 0~100.

Reset: Select “Reset”, the input property will be recover to factory setting.


Test Pattern: Slide the Test Pattern switch to enable or disable the function.

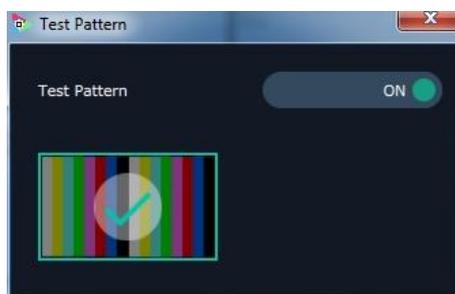

For USB input setting there is USB player setting



select “USB Player”, it will enter to the USB Player interface, including movie and picture, default play the USB picture.

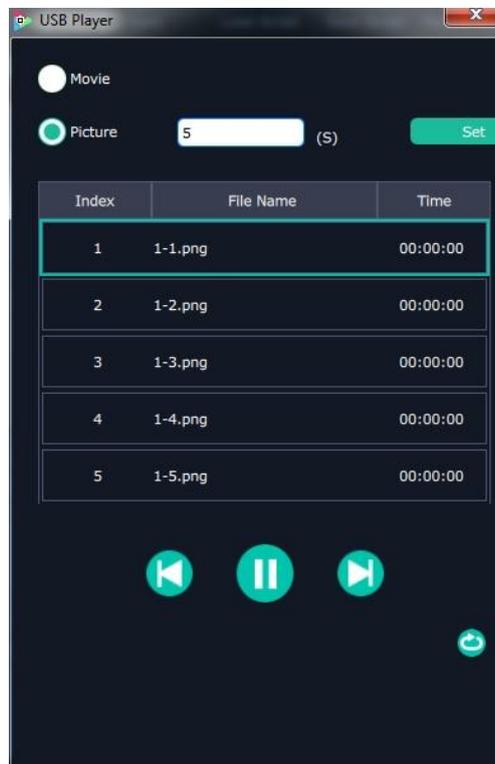


USB movie player setting: Can select play in order, random, single cycle and all cycle, switch to pre or next, pause or play, and read the movie name, progress bar and time.


USB picture play time: Click the picture, it will display the setting interface, default the time is 0s. Set the switch time, and click “Set”.


USB picture player setting: Can select play in order, random, single cycle and all cycle, and switch to pre or next, pause or play.

DVI module of FLEX series is compatible with VGA,CVBS, YPbPr signals via adapter , therefore for other signal such as VGA input, users need to choose VGA in DVI input setting as below:

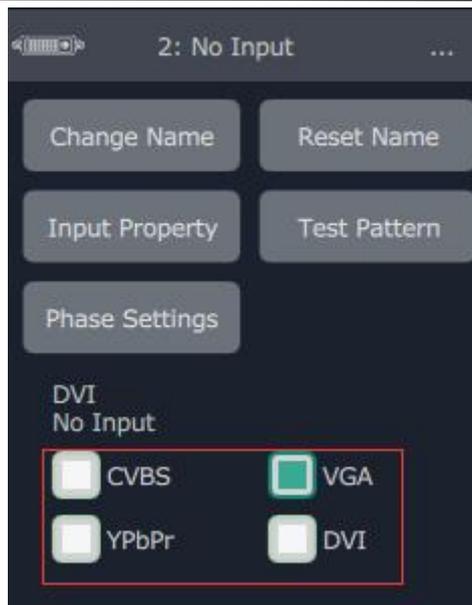

Output Setting

Click on shortcut , it will enter the interface as follows:

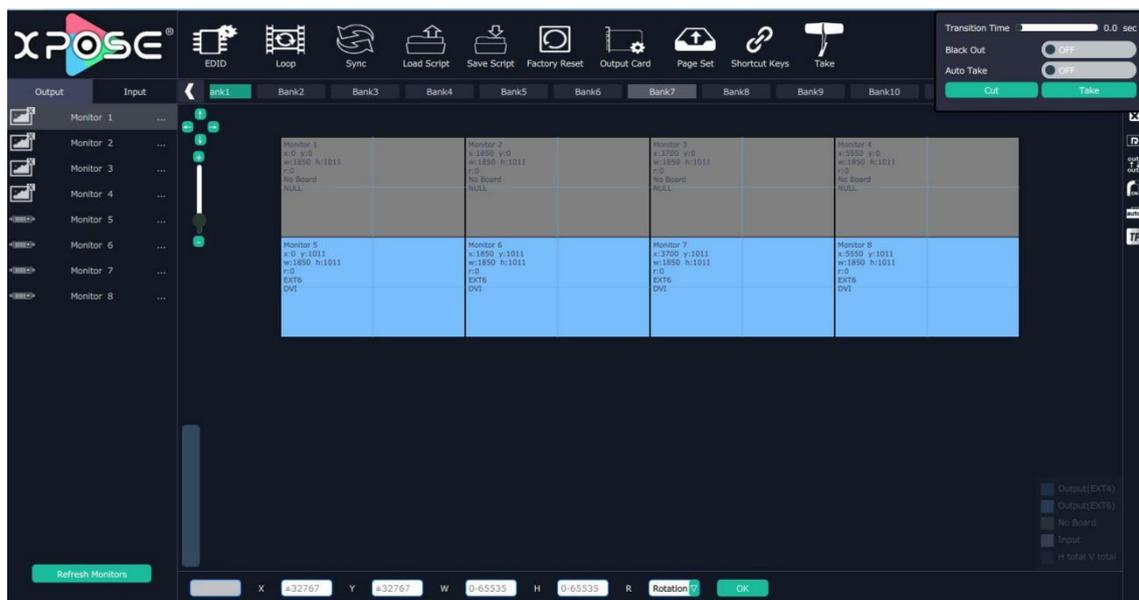

Close monitor: Click the icon  on the top right corner of the monitor to close one monitor, or


click the shortcut  on the right side of the interface to close all monitors.

Reset outputs: User can reset outputs by clicking the shortcut  on the right side of the interface.

Swap outputs: User can swap outputs by clicking the shortcut  on the right side of the


interface, as

shown in the figure below.

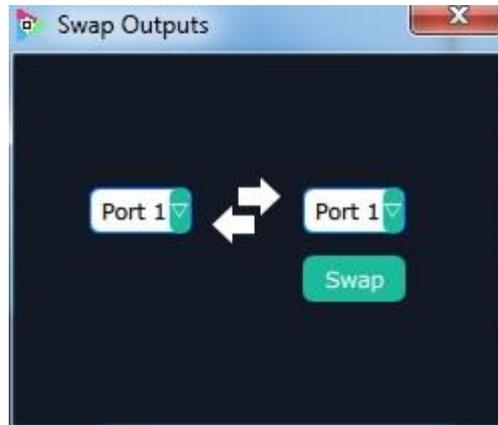


Auto tile: User can enable or disable the auto tile function by clicking the auto tile shortcut on the right side of the interface. If select auto tile "ON", the layer will automatically snap to the output grid when move the layer to the position within the threshold value.


Monitor Size and Position Setting: Move the mouse to the lower right brink of the monitor, and press the left key of the mouse. Move the mouse to the suitable position and release the mouse. But this method can only adjust the size and location roughly, if an accurate adjustment is needed, select the monitor, and set the X, Y, width and height in the bottom of the interface.



Monitor Size changed equivalently: Select any monitor, for example, select monitor 1, and adjust the size. Click this monitor, then press button C and don't let go, select the monitor that will set, the size of the selected monitor will be changed to the same size of monitor 1, as shown in the figure below:

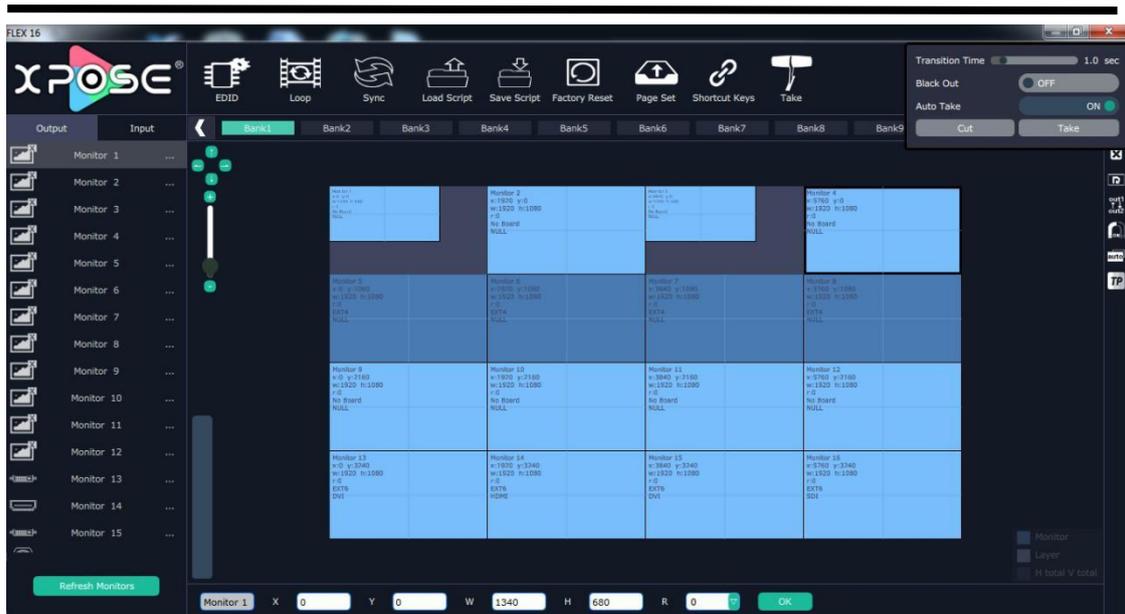

Rotation: Select the monitor, and set the rotation as 0°, 90°, 180° and 270° in the bottom of the interface. Click “OK” to confirm. As shown in the figure below:



Note: select any 1 out of the 4 outputs which are connected to the same EXT extension interface.

Right click the monitor can also rotate the monitor.

Output Area Size Setting: Move the mouse to the output area and slide the mouse wheel, the output area size can be zoom in and out

Adjust Layer: Two ways can change the size and location of the opened layer:

a. Drag the opened layer by mouse. The details are: move the mouse to the brink of the opened layer, when the mouse shows “<—>”, press the left key of the mouse and drag the window to a suitable size and then release the mouse. Or move the mouse to the lower right of the opened layer, press the left key of the mouse and drag the window to a suitable size and then release the mouse. Move the mouse to the opened layer and press the left key of the mouse and move the mouse, then the layer will be moved, release the mouse when moved to the suitable location. But this method can only adjust the size and location roughly, if an accurate adjustment is needed, the second method can be used.

b. Select the layer to be adjusted, and set the X, Y, width and height in the bottom of the interface.



al relations between layers: After creating the layers, the hierarchical relations can be changed by the following: click the shortcut key bring layer to front “

Close one layer or all layers: Click the icon 

Lock the layer: Click the icon 

Full the layer: Click the icon 

Copy and paste bank: Select the bank that to copy, and click the copy bank shortcut “

Adaptive: If scale the output area to a large area, click the adaptive shortcut “

Layer Property Setting

Select the layer to be adjusted, click the More shortcut “

The image shows a 'Property' window with the following settings:

- Scale:** X: 1350, Y: 2690, Width: 1920, Height: 1080
- Crop:** Left: 0, Top: 0, Width: 1920, Height: 1080
- Display Mode:** Live (selected)
- Mirror:** OFF (selected)
- Alpha:** 128
- Sharpness:** 50
- Brightness:** 50
- Contrast:** 50
- Saturation:** 50
- Color Temp:** Red: 50, Green: 50, Blue: 50

Buttons for 'Reset' and 'Set' are located at the bottom right of the window.

Scale: Set the X, Y, width and height.

Crop: Crop the left, top, width and height.

Display Mode: Select "Live" or "Freeze".

Mirror: Enable or disable the mirror function, default "OFF".

Bypass Mode: Enable or disable the bypass mode. When select "ON", the output format will be the same with the input format.

Alpha: Set the alpha, the adjustment range is 0~128.

Sharpness: Set the sharpness, the adjustment range is 0~100.

Brightness: Set the brightness, the adjustment range is 0~100.

Contrast: Set the contrast, the adjustment range is 0~100.

Saturation: Set the saturation, the adjustment range is 0~100.

Color Term: Set the color temp (red, green and blue), the adjustment range is 0~100.

Reset: Select "Reset", the input property will be recover to factory setting.

Take

The take interface is shown as the figure below:



Set the transition time, and the adjustment range is 0~10S.


Slide the black out switch to enable or disable the black function. Auto take on is the default state. If select black out and auto take on, the preview image will black or seamless switch to LED display instantaneously.

Click "Cut" or "Take", the preview will be cut or seamless switch to LED display.


EDID



Click the EDID shortcut "EDID", and pop-up window as follows:

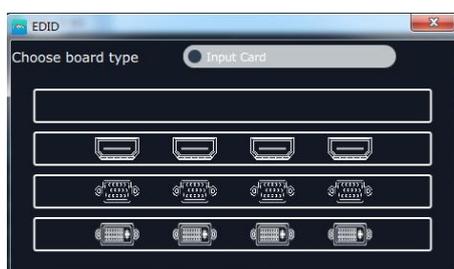

The special display project or LED display application would like to require special resolution settings to meet the requirement. Select the input or output board to read and write the EDID. As shown in the figure below:

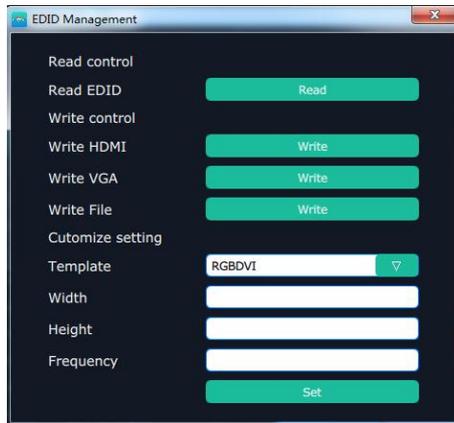


Loop



Click the loop shortcut “”, and pop-up window as follows:


Timing Loop

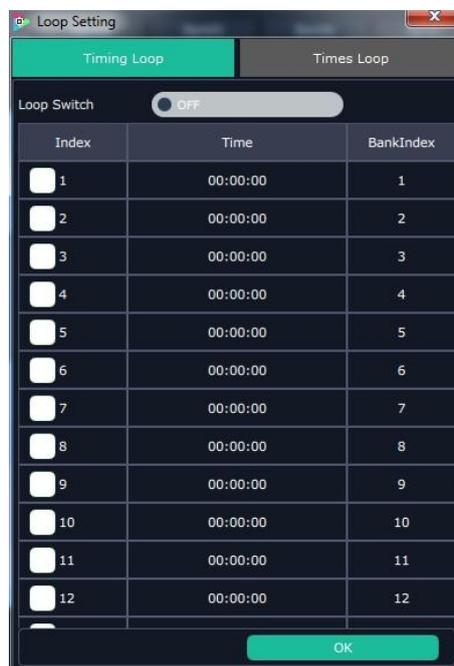

Slide the loop switch to enable or disable the timing loop function for the bank. If select “ON”, the exact time to play the bank can be set.

Times Loop

Slide the loop switch to enable or disable the times loop function for the bank. If select “ON”, the exact length of time to play the bank can be set.

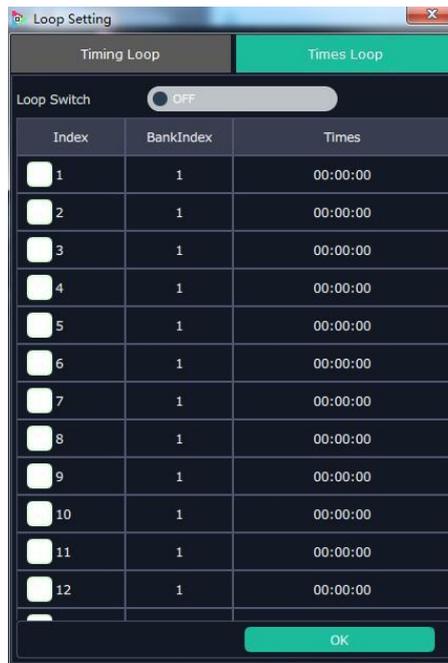

Sync



Click the sync shortcut “**Sync**” to synchronize the current data.

Load Script



Click the load script shortcut “**Load Script**”, user can load the data from the computer.

Save Script



Click the save script shortcut “**Save Script**”, user can save the data to the computer.

Factory Reset




Click the factory reset shortcut “**Factory Reset**” to reset to factory settings.



Page Set




Click the page set shortcut “” to load and save pages.

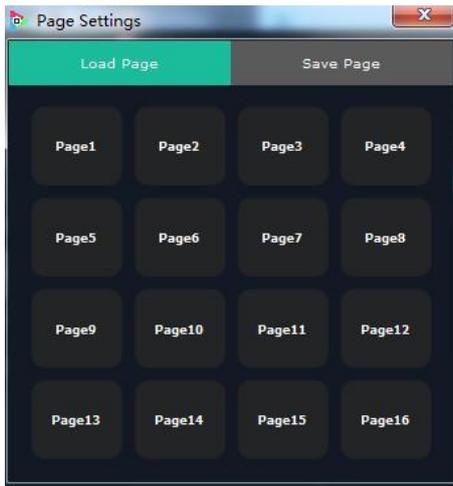

Shortcut Keys




Click the shortcut “”, and pop-up window as follows:

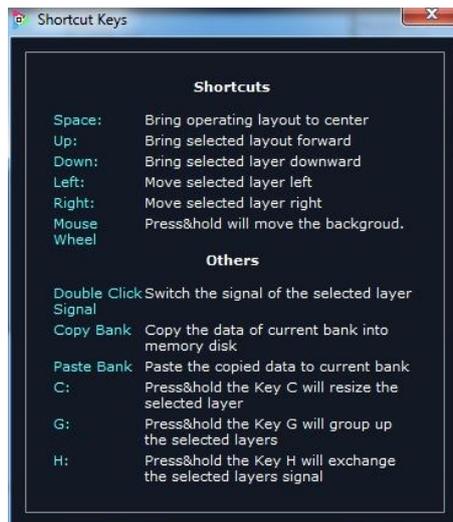

Use shortcut key to operate fast and easily.


3.2.7 System Settings

Click "System Settings" in the main interface:

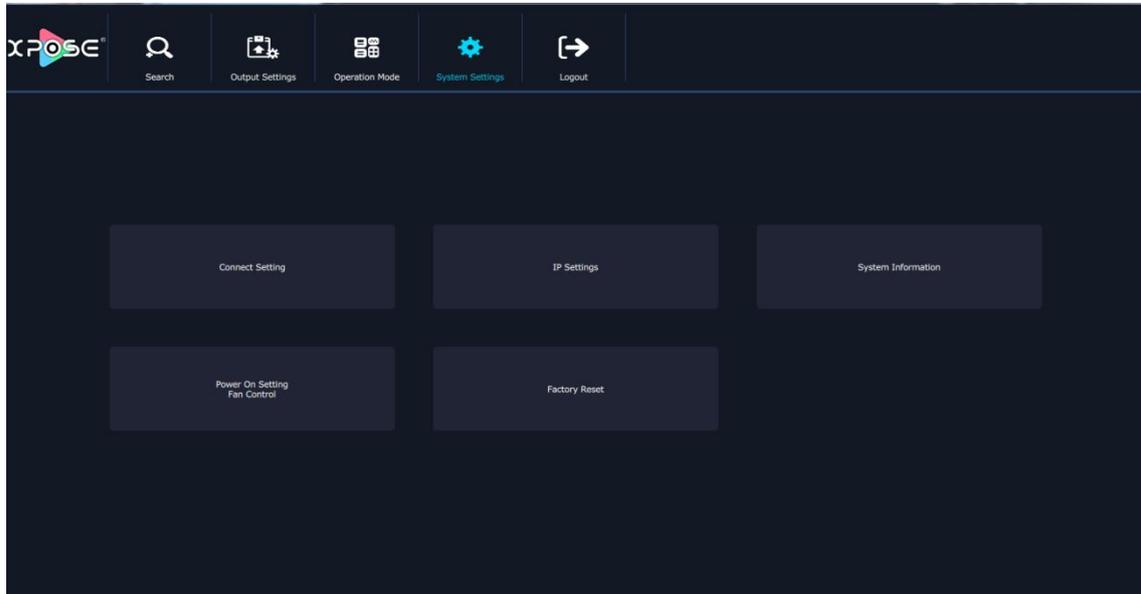


Connect Setting

Click "Connect Setting": Select "COM Port" and "Baud Rate", click the drop down arrow after them, and click "OK".

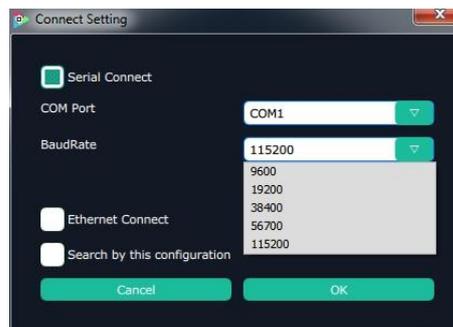


Setting the device connecting ways: Serial Connect, Ethernet Connect and Search by this configuration.

After setting "COM Port" and "Baud Rate", pop-up window as follows:

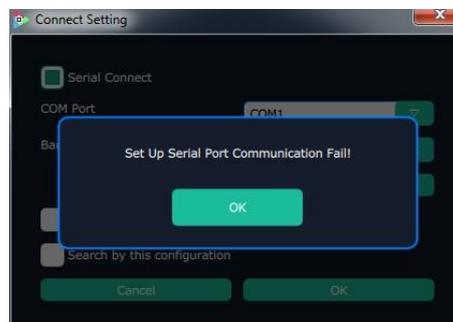

IP Settings

Click the “IP Settings”, and pop-up window as follows:

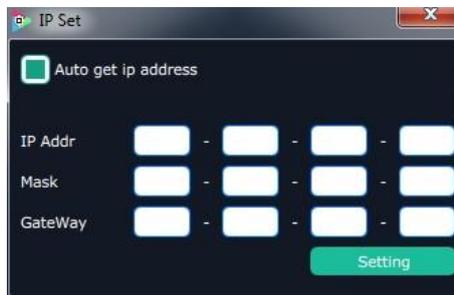


The screenshot shows a window titled "IP Set" with a dark background. At the top, there is a checkbox labeled "Auto get ip address" which is checked. Below this, there are three rows of input fields: "IP Addr", "Mask", and "GateWay". Each row contains four small input boxes separated by hyphens. At the bottom right of the window is a green button labeled "Setting".

Default “Auto get IP address”. Users can also set IP address, Mask and GateWay manually. This is usually used if one computer control some devices or remote control. It takes effect after reboot the software if change IP through network.

System Information

Click “System Information”, and pop-up window as follows:

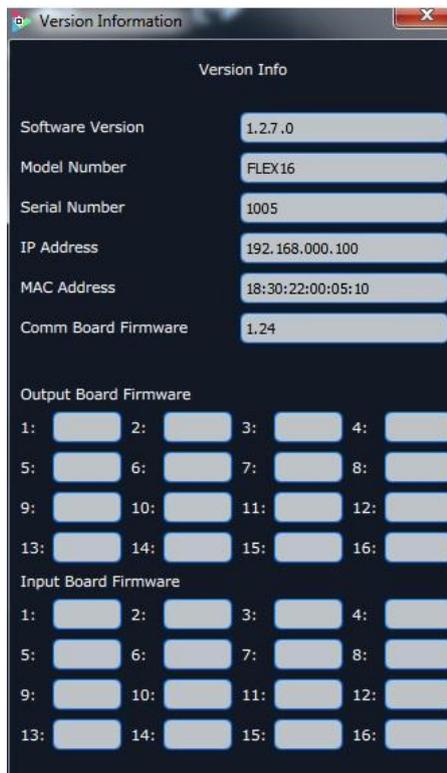

The screenshot shows a window titled "Version Information" with a dark background. The title bar also says "Version Information". The main content area is titled "Version Info" and contains several fields with their values displayed in light blue boxes:

- Software Version: 1.2.7.0
- Model Number: FLEX16
- Serial Number: 1005
- IP Address: 192.168.000.100
- MAC Address: 18:30:22:00:05:10
- Comm Board Firmware: 1.24


Below these fields, there are two sections for firmware versions:

- Output Board Firmware:** A grid of 16 input fields labeled 1: through 16:.
- Input Board Firmware:** A grid of 16 input fields labeled 1: through 16:.

Display the device version information. Including Model Number, Serial Number, IP Address, firmware version, etc.

Factory Reset

Click "Factory Reset", and pop-up window as follows:

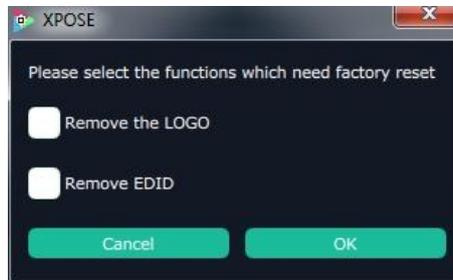


Click "OK" or "Cancel" to confirm the reset.

Power On Setting Fan Control


To enable Delay Power On Setting, slide OFF to ON, set Time-Lapse Power On in 0~255S.

To disable Auto Fan control setting, slide OFF to ON, Set Fan Speed at 0~100

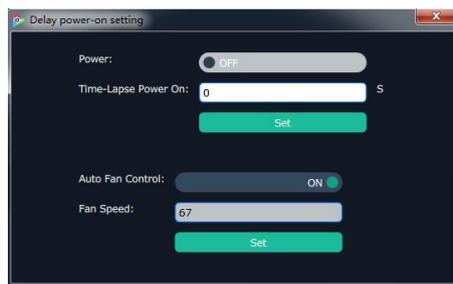


3.2.8 Logout

Click "Logout"  to exit the XPOSE software, and pop up window as follows:

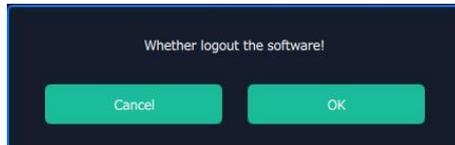

Click "cancel" or "OK" to confirm

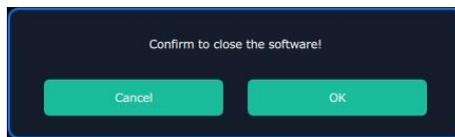

User also can be click the right corner  red button to exit software directly

Chapter 4 Order Codes

4.1 Product

710-0016-XX-0 FLEX 16

4.2 Modules

4.2.1 Input

190-0001-10-2	Single USB2.0 Input/Backup Input Module
190-0001-07-2	Single 3G SDI In/Loop Module
190-0001-13-2	Single HDMI Input Module
190-0001-04-2	Single DVI Composite Input Module
190-0002-29-0	Single HDBaseT Input Module
980-0004-01-0	Single EXT4F-IM Input Interface

4.2.2 Output

790-0001-21-0	Single DVI Composite Output Module
790-0001-22-0	Single HDMI Output Module
790-0001-24-0	Single SDI Output Module
790-0001-27-0	Single DP Output Module
190-0002-30-0	Single HDBaseT Output Module
980-0002-01-0	EXT4F-OS Splicing Output Module
980-0003-01-0	EXT4F-OM Matix Output Module

4.2.3 Others

980-1002-01-0	Matrix Front Panel
980-1001-01-0	Basic Front Panel

Chapter 5 Support

www.rgblink.com



Inquiries

+86-592-577-1197
info@rgblink.com
rgblink.com/contact-us

Global Support

support@rgblink.com
rgblink.com/support-me



@RGLINK



/rgblink



+rgblink



/rgblink



rgblink



rgblink

RGblink Headquarters

Xiamen, China

Room 601A, No. 37-3
Banshang community,
Building 3, Xinke Plaza, Torch
Hi-Tech Industrial
Development Zone, Xiamen,
China

+86-592-577-1197

China Regional Sales & Support

Shenzhen, China

11th Floor Baiwang Building
5318 Shahe West Road
Baimang, Nanshan

+86-755 2153 5149

Beijing Region Office

Beijing, China

Building 8, 25 Qixiao Road
Shahe Town Changping

+010- 8577 7286

Europe Regional Sales & Support




Eindhoven, Holland



Flight Forum Eindhoven
5657 DW

+31 (040) 202 71 83

Chapter 6 Appendix




6.1 Specification

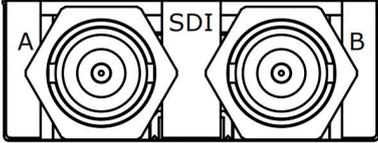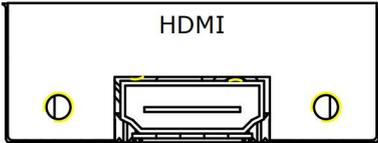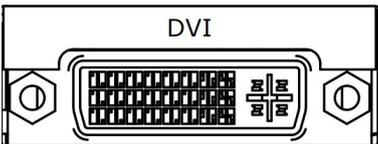
SDI Input/Loop Module		
Connector Appearance		
Numbers of Connectors	2 (1 In/1Loop)	
Connectors	BNC	
Supported Standard	SMPTE 425M (Level A & B) SMPTE 424M SMPTE 292M SMPTE 259M-C DVB-ASI	
Supported Resolutions	SMPTE 480i 576i 720p@50/59.94/60 1080i@50/59.94/60 1080p@23.98/24/25/29.97/30/50/59.94/60	
HDMI Input Module		
Connector Appearance		
Numbers of Connectors	1	
Connectors	HDMI-A	
Supported Standard	HDMI 1.3	
Supported Resolutions	SMPTE	480i 576i 720p@50/59.94/60 1080i@50/59.94/60 1080p@50/59.94/60
	VESA	800x600@60 1024x768@60 1280x720@50/59.94/60 1280x800@60 1280x960@60 1280x1024@60 1400x1050@60 1600x1200@60 1920x1080@23.98/24/25/29.97/30/50/59.94/60
DVI Composite Input Module		
Connector Appearance		
Numbers of Connectors	1	
Connectors	DVI-I (Compatible with VGA, CVBS, YPbPr via Adapter)	
Supported Standard	DVI	1.0
	VGA	UXGA
Supported	SMPTE	480i 576i 720P@60 1080P@60

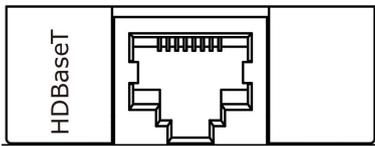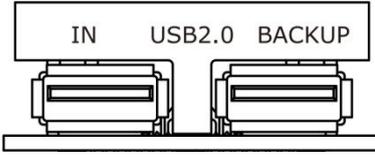Resolutions	VESA	800x600@60 1024x768@60 1280x720@60 1280x800@60 1366x768@60 1400x1050@60 1600x1200@60 1920x1080@60			
HDBaseT Input Module					
Connector Appearance					
Connectors	RJ45				
Numbers of Connectors	1				
Supported Standard	HDBaseT	1.0			
Supported Resolution	SMPTE	720p@50/59.94/60 1080i@50/59.94/60 1080p@23.98/24/25/29.97/30/50/59.94/60			
	VESA	800x600@60/75/85 1024x768@60/75/85 1280x768@60 1280x800@60 1280x1024@60/75/85 1366x768@60 1366x768@60 1400x900@60 1600x1050@60 1600x1200@60 1680x1050@60 1920x1080@60 1920x1200@60			
USB2.0 Input Module					
Connector Appearance					
Connectors	USB-A				
Supported Standard	USB 2.0				
Media Types	Video Formats	MPEG1 MPEG2 MPEG4 H264 RM RMVB MOV MJPEG VC1 DIVX FLV			
	Image Formats	JPEG BMP PNG			
	Audio Formats	WMA MP3 M4A AAC			
Video Formats	File Type	File Extension	Encoding	Max Resolution	Max Bitrate
	MPEG1	.DAT .MPG .MPEG		1920x1080@30	20Mbps
	MPEG2	.MPG		1920x1080@30	20Mbps
	MPEG4	.AVI .MP4 .3GP .ASF	DVIX XVID	1920x1080@30	20Mbps
	RM RMVB	.RM .RMVB	RV8 RV9 RV10	1280x720@30	10Mbps
	H264	.MKV .MOV	H.264	1920x1080@30	20Mbps

	MJPEG	.AVI		640x480@30	10Mbps
	DivX	.DIVX .AVI	MPEG DVIX H264	1920x1080@30	20Mbps
	VC1	.WMV .ASF	VC1	1920x1080@30	20Mbps
	FLV	.FLV	H264	1920x1080@30	20Mbps
Picture Formats	File Type	Max Resolution	Compression	Supported Resolution	
	JPEG	15360x8640	Progressive JPEG	Support 1024x768 only	
			Baseline (“Standard”)	Full Range	
			Baseline Optimized	Full Range	
	BMP	9600x6400	Monochrome	Full Range	
			16-color	Full Range	
			256-color	Full Range	
			16 bit	Full Range	
			24 bit	Full Range	
			32 bit	Full Range	
		PNG	9600x6400	Non-interlaced	Full Range

DP Output Module	
Connector Appearance	
Numbers of Connectors	1
Connectors	DisplayPort
Supported Standard	DP1.1
Supported Resolution	SMPTE 720p@50/59.94/60 1080i@50/59.94/60 1080p@50/59.94/60
	VESA 800x600@60 1024x768@60 1280x720@50/59.94/60 1280x800@60 1280x960@60 1280x1024@60 1400x1050@60 1600x1200@60 1920x1080@23.98/24/25/29.97/30/50/59.94/60

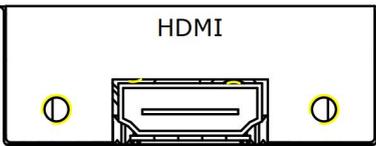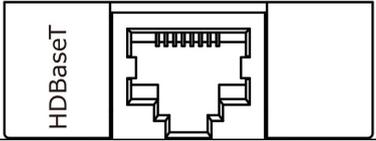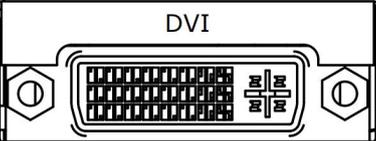HDMI Output Module		
Connector Appearance		
Numbers of Connectors	1	
Connectors	HDMI-A	
Supported Standard	HDMI 1.3	
Supported Resolution	SMPTE	720p@50/59.94/60 1080i@50/59.94/60 1080p@50/59.94/60
	VESA	800x600@60 1024x768@60 1280x720@50/59.94/60 1280x800@60 1280x960@60 1280x1024@60 1400x1050@60 1600x1200@60 1920x1080@23.98/24/25/29.97/30/50/59.94/60
HDBaseT Output Module		
Connector Appearance		
Connectors	RJ45	
Numbers of Connectors	1	
Supported Standard	HDBaseT	1.0
Supported Resolution	SMPTE	720p@50/59.94/60 1080i@50/59.94/60 1080p@23.98/24/25/29.97/30/50/59.94/60
	VESA	800x600@60/75/85 1024x768@60/75/85 1280x768@60 1280x800@60 1280x1024@60/75/85 1360x768@60 1366x768@60 1400x900@60 1600x1050@60 1600x1200@60 1680x1050@60 1920x1080@60 1920x1200@60
DVI Output Module		
Connector Appearance		
Numbers of Connectors	1	
Connectors	DVI-I (Compatible with VGA, CVBS, YPbPr via Adapter)	
Supported Standard	DVI	1.0
	VGA	UXGA
Supported Resolution	SMPTE	720P@60 1080P@60
	VESA	800x600@60 1024x768@60 1280x720@60

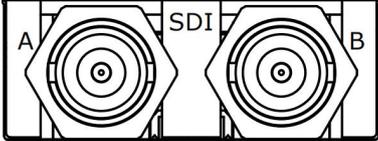		1280x800@60 1366×768@60 1400x1050@60 1600x1200@60 1920x1080@60
SDI Output Module		
Connector Appearance		
InputNumbers of Connectors	2 (1 In/1Loop)	
Connectors	BNC	
Supported Standard	SMPTE 425M (Level A & B) SMPTE 424M SMPTE 292M SMPTE 259M-C DVB-ASI	
Supported Resolution	SMPTE	720p@50/59.94/60 1080i@50/59.94/60 1080p@23.98/24/25/29.97/30/50/59.94/60

Extras	
Communication	1×LAN 1×RS232 (1×RJ45 1×RJ11)
Power Supply	AC 90-264V, 50/60Hz
Max Power	205W
Working Environment	0°C-40°C
Relativity Humidity	10% –85 % RH
Weight	8.05 kg
Dimensions	484mm×467mm×89mm
Product Warranty	3 years parts and labor warranty

6.2 Terms & Definitions

The following terms and definitions are used throughout this guide.

- **“ASCII”**: American Standard for Information Interchange. The standard code consisting of 7-bit coded characters (8 bits including parity check) used to exchange information between data processing systems, data communication systems, and associated equipment. The ASCII set contains control characters and graphic characters.
- **“Aspect ratio”**: The relationship of the horizontal dimension to the vertical dimension of an image. In viewing screens, standard TV is 4:3, or 1.33:1; HDTV is 16:9, or 1.78:1. Sometimes the “:1” is implicit, making TV = 1.33 and HDTV = 1.78.
- **“AV”**: Audio visual, or audio video.
- A **“Background”** is an unscaled source, typically originating from a computer. A background source appears at the system’s lowest priority — visually in back of all other sources.
- **“Baudrate”**: Named of J.M.E. Baudot, the inventor of the Baudot telegraph code. The number of the electrical oscillations per second, called baud rate. Related to, but not the same as, transfer rate in bits per second (bps).
- **“Blackburst”**: The video waveform without the video elements. It includes the vertical sync, horizontal sync, and the chroma burst information. Blackburst is used to synchronize video equipment to align the video output. One signal is normally used to set up an entire video system or facility. Sometimes it is called House sync.
- **“BNC”**: Bayonet Neill-Concelman. A cable connector used extensively in television and named for its inventors. A cylindrical bayonet connector that operates with a twist-locking motion. To make the connection, align the two curved grooves in the collar of the male connector with the two projections on the outside of the female collar, push, and twist. This allows the connector to lock into place without tools.
- **“Brightness”**: Usually refers to the amount or intensity of video light produced on a screen without regard to color. Sometimes called “black level.”
- **“CAT 5”**: Category 5. Describes the network cabling standard that consists of four unshielded twisted pairs of copper wire terminated by RJ-45 connectors. CAT 5 cabling supports data rates up to 100 Mbps. CAT 5 is based on the EIA/TIA 568 Commercial Building Telecommunications Wiring Standard.
- **“Color bars”**: A standard test pattern of several basic colors (white, yellow, cyan, green, magenta, red, blue, and black) as a reference for system alignment and testing. In NTSC video, the most commonly used color bars are the SMPTE standard color bars. In PAL video, the most commonly used color bars are eight full field bars. In the computer, the most commonly used color bars are two rows of reversed color bars.
- **“Color burst”**: In color TV systems, a burst of subcarrier frequency located on the back porch of the composite video signal. This serves as a color synchronizing signal to establish a frequency and phase reference for the chroma signal. Color burst is 3.58 MHz for NTSC and 4.43 MHz for PAL.

-
- **“Color temperature”**: The color quality, expressed in degrees Kelvin(K), of a light source. The higher the color temperature, the bluer the light. The lower the temperature, the redder the light. Benchmark color temperature for the A/V industry include 5000°K, 6500°K, and 9000°K.
 - **“Contrast ratio”**: The ratio of the high light output level divided by the low light output level. In theory, the contrast ratio of the television system should be at least 100:1, if not 300:1. In reality, there are several limitations. In the CRT, light from adjacent elements contaminate the area of each element. Room ambient light will contaminate the light emitted from the CRT. Well-controlled viewing conditions should yield a practical contrast ratio of 30:1 to 50:1.
 - **“DVI”**: Digital Visual Interface. The digital video connectivity standard that was developed by DDWG (Digital Display Work Group). This connection standard offers two different connectors: one with 24 pins that handles digital video signals only, and one with 29 pins that handles both digital and analog video.
 - **“EDID”**: Extended Display Identification Data – EDID is a data structure used to communicate video display information, including native resolution and vertical interval refresh rate requirements, to a source device. The source device will then output the optimal video format for the display based on the provided EDID data, ensuring proper video image quality. This communication takes place over the DDC – Display Data Channel.
 - **“Ethernet”**: A Local Area Network (LAN) standard officially known as IEEE 802.3. Ethernet and other LAN technologies are used for interconnecting computers, printers, workstations, terminals, servers, etc. within the same building or campus. Ethernet operates over twisted pair and over coaxial cable at speeds starting at 10Mbps. For LAN interconnectivity, Ethernet is physical link and data link protocol reflecting the two lowest layers of the OSI Reference Model.
 - **“Frame”**: In interlaced video, a frame is one complete picture. A video frame is made up of two fields, or two sets of interlaced lines. In a film, a frame is one still picture of a series that makes up a motion picture.
 - **“Gamma”**: The light output of a CRT is not linear with respect to the voltage input. The difference between what you should have and what is actually output is known as gamma.
 - **“HDMI” - High – Definition Multimedia Interface**: An interface used primarily in consumer electronics for the transmission of uncompressed high definition video, up to 8 channels of audio, and control signals, over a single cable. HDMI is the de facto standard for HDTV displays, Blu-ray Disc players, and other HDTV electronics. Introduced in 2003, the HDMI specification has gone through several revisions.
 - **“HDSDI”**: The high-definition version of SDI specified in SMPTE-292M. This signal standard transmits audio and video with 10 bit depth and 4:2:2 color quantization over a single coaxial cable with a data rate of 1.485 Gbit/second. Multiple video resolutions exists including progressive 1280x720 and interlaced 1920x1080 resolution. Up to 32 audio signals are carried in the ancillary data.
 - **“JPEG” (Joint photographic Expects Group)**: Commonly used method of lossy compression for photographic images using a discreet cosine transfer function. The

degree of compression can be adjusted, allowing a selectable tradeoff between storage size and image quality. JPEG typically achieves 10:1 compression with little perceptible loss in image quality. Produces blocking artifacts.

- **“MPEG”**: Motion Picture Expert Group. A standard committee under the auspices of the International Standards Organization working on algorithm standards that allow digital compression, storage and transmission of moving image information such as motion video, CD-quality audio, and control data at CD-ROM bandwidth. The MPEG algorithm provides inter-frame compression of video images and can have an effective compression rate of 100:1 to 200:1.
- **“NTSC”**: The color video standard used in North America and some other parts of the world created by the National Television Standards Committee in the 1950s. A color signal must be compatible with black-and-white TV sets. NTSC utilizes an interlaced video signals, 525 lines of resolution with a refresh rate of 60 fields per second (60 Hz). Each frame is comprised of two fields of 262.5 lines each, running at an effective rate of 30 frames per second.
- **“Operator”**: Refers to the person who uses the system.
- **“PAL”**: Phase Alternate Line. A television standard in which the phase of the color carrier is alternated from line to line. It takes four full pictures (8 fields) for the color-to-horizontal phase relationship to return to the reference point. This alternation helps cancel out phase errors. For this reason, the hue control is not needed on a PAL TV set. PAL, in many transmission forms, is widely used in Western Europe, Australia, Africa, the Middle East, and Micronesia. PAL uses 625-line, 50-field (25 fps) composite color transmission system.
- **“PIP”**: Picture-in-Picture. A small picture within a larger picture created by scaling down one of the images to make it smaller. Each picture requires a separate video source such as a camera, VCR, or computer. Other forms of PIP displays include Picture-by-Picture (PBP) and Picture-with-Picture (PWP), which are commonly used with 16:9 aspect display devices. PBP and PWP image formats require a separate scaler for each video window.
- **“Polarity”**: The positive and negative orientation of a signal. Polarity usually refers to the direction or a level with respect to a reference (e.g. positive sync polarity means that sync occurs when the signal is going in the positive direction).
- **“RJ-45”**: Registered Jack-45. A connector similar to a telephone connector that holds up to eight wires, used for connecting Ethernet devices.
- **“RS-232”**: An Electronic Industries Association (EIA) serial digital interface standard specifying the characteristics of the communication path between two devices using either DB-9 or DB-25 connectors. This standard is used for relatively short-range communication and does not specify balanced control lines. RS-232 is a serial control standard with a set number of conductors, data rate, word length, and type of connector to be used. The standard specifies component connection standards with regard to the computer interface. It is also called RS-232-C, which is the third version of the RS-232 standard, and is functionally identical to the CCITT V.24 standard.
- **“Saturation”**: Chroma, chroma gain. The intensity of the color, or the extent to which

a given color in any image is free from white. The less white in a color, the truer the color or the greater its saturation. On a display device, the color control adjusts the saturation. Not to be confused with the brightness, saturation is the amount of pigment in a color, and not the intensity. Low saturation is like adding white to the color. For example, a low-saturated red looks pink.

- **“Scaling”**: A conversion of a video or computer graphic signal from a starting resolution to a new resolution. Scaling from one resolution to another is typically done to optimize the signal for input to an image processor, transmission path or to improve its quality when presented on a particular display.
- **“SDI”**: Serial Digital Interface. The standard based on a 270 Mbps transfer rate. This is a 10-bit, scrambled, polarity independent interface with common scrambling for both component ITU-R 601 and composite digital video and four channels of (embedded) digital audio.
- **“Seamless Switching”**: A feature found on many video switchers. This feature causes the switcher to wait until the vertical interval to switch. This avoid a glitch (temporary scrambling) which normally is seen when switching between sources.
- **“SMPTE”**: Society of Motion Picture and Television Engineers. A global organization, based in the United States, that sets standards for baseband visual communications. This includes film as well as video and television standards.
- **“S-Video”**: A composite video signal separated into the luma (“Y” is for luma, or black and white information; brightness) and the chroma (“C” is an abbreviation for chroma, or color information).
- **“Sync”**: Synchronization. In video, sync is a means of controlling the timing of an event with respect to other events. This is accomplished with timing pulses to insure that each step in a process occurs at the correct time. For example, horizontal sync determines exactly when to begin each horizontal scan line. Vertical sync determines when the image is to be refreshed to start a new field or frame. There are many other types of sync in video system. (Also known as “sync signal” or “sync pulse.”)
- **“TCP/IP”**: Transmission Control Protocol/Internet Protocol. The communication protocol of the Internet. Computers and devices with direct access to the Internet are provided with a copy of the TCP/IP program to allow them to send and receive information in an understandable form.
- **“USB”**: Universal Serial Bus. USB was developed by seven PC and telecom industry leaders (Compaq, DEC, IBM, Intel, Microsoft, NEC, and Northern Telecom). The goal was easy plug-and-play expansion outside the box, requiring no additional circuit cards. Up to 127 external computer devices may be added through a USB hub, which may be conveniently located in a keyboard or monitor. USB devices can be attached or detached without removing computer power. The number of devices being designed for USB continues to grow, from keyboards, mice, and printers to scanners, digital cameras, and ZIP drives.
- **“VESA”**: Video Electronics Standards Association. A nonprofit number organization dedicated to facilitating and promoting personal computer graphics through improved standards for the benefit of the end-user. www.vesa.org

-
- **“VGA”**: Video Graphics Array. Introduced by IBM in 1987, VGA is an analog signal with TTL level separate horizontal and vertical sync. The video outputs to a 15-pin HD connector and has a horizontal scan frequency of 31.5 kHz and vertical frequency of 70 Hz (Mode 1, 2) and 60 Hz (Mode 3). The signal is non-interlaced in modes 1, 2, and 3 and interlaced when using the 8514/A card (35.5 kHz, 86 Hz) in mode 4. It has a pixel by line resolution of 640×480 with a color palette of 16 bits and 256,000 colors.
 - **“YCrCb”**: Used to describe the color space for interlaced component video.
 - **“YPbPr”**: Used to describe the color space for progressive-scan (non-interlaced) component video.

6.3 Revision History

The table below lists the changes to the User Manual of FLEX 16 .

Format	Time	ECO#	Description	Personnel
V1.0	2019-9-19	0000#	Release	Fanny